



Online Guide



www.boostmobile.com

©2010 Samsung. All rights reserved. BOOST and BOOSTMOBILE and Logo are trademarks of Boost. Other marks are the property of their respective owners.

3/26/10

Table of Contents

Introduction	1
Your Phone's Menu	1
Section 1: Getting Started	7
1A. Setting Up Service	8
Setting Up Your Phone	8
Activating Your Phone	9
Welcome Sequence	9
Setting Up Your Voicemail	10
Getting Help	10
Section 2: Your Phone	13
2A. Phone Basics	14
Your Phone	14
Viewing the Display Screen	18
Turning Your Phone On and Off	21
Using Your Phone's Battery and Charger	22
Navigating Through the Menus	25
Displaying Your Phone Number	26
Making and Answering Calls	26

Entering Text in Portrait Mode	34
Entering Text in Landscape Mode	39
2B. Navigating the Main Screen	44
Getting to Know One Click	44
Personalizing the Carousel	46
Personalizing the Home Screen	49
2C. Settings	51
Personalizing Your Phone	51
Sound Settings	52
Display Settings	55
Location Settings	58
Messaging Settings	58
Airplane Mode	61
TTY Use	61
Phone Setup Options	62
Security Settings	64
2D. History	70
Viewing History	70
History Options	71
Making a Call From History	71
Saving a Phone Number From History	72

Erasing History	72
2E. Contacts	74
Adding a New Contacts Entry	74
Saving a Number from Standby	75
Adding a Phone Number to a Contacts Entry ..	76
Editing a Contacts Entry's Phone Number	76
Deleting a Contact	76
Assigning Speed Dial Numbers	76
Editing a Contacts Entry	78
Adding a New Group	78
Assigning a Picture to an Entry	79
Selecting a Ringtone for an Entry	79
Secret Contacts Entries	80
Dialing Services	81
2F. Calendar and Tools	82
Using Your Phone's Calendar	82
Task List	85
Countdown	86
File Manager	86
Alarm Clock	87
Memo Pad	88

Calculator	89
Tip Calculator	90
World Time	90
Updating Phone Software	90
Updating the PRL	90
2G. Voice Services	91
Automatic Speech Recognition (ASR)	91
Managing Voice Memos	97
2H. microSD Card	99
Your Phone's microSD Card Slot	99
microSD Settings	101
microSD Folders	102
Connecting Your Phone to Your Computer ..	102
2I. Camera	106
Taking Pictures	106
Recording Videos	112
Storing Pictures	114
Sending Pictures and Video via Media Mail ..	116
Managing Boost Media Mail	118
Settings and Info	122
2J. Bluetooth	123

Turning Bluetooth On and Off	123
Using the Bluetooth Settings Menu	124
Pairing Bluetooth Devices	125
Sending Items via Bluetooth	126
Section 3: Service.....	129
3A. Service Features: The Basics	130
Voicemail	130
Text Messaging (SMS)	132
Caller ID	135
Call Waiting	135
Making a Three-Way Call	135
Call Forwarding	136
3B. Web and Data Services	137
Data Applications	137
Getting Started With Data Services	138
Accessing Messaging	142
Downloading Games, Ringtones and More ..	145
Exploring the Web	147
Data Services FAQs	152
3C. Music	154
Playing a Music File	155

3D. GPS Navigation	157
GPS Services	157
Navigation	157
Using Navigation	158
Section 4: Safety and Warranty Information	159
4A. Important Safety Information	160
General Precautions	160
Maintaining Safe Use of and Access to Your Phone	161
Using Your Phone With a Hearing Aid Device	163
Caring for the Battery	164
Radio Frequency (RF) Energy	165
Owner's Record	167
User Guide Proprietary Notice	168
4B. Manufacturer's Warranty	169
Manufacturer's Warranty	169
Index.....	175

Introduction

This *User Guide* introduces you to Boost® service and all the features of your new phone. It's divided into four sections:

- ◆ *Section 1: Getting Started*
- ◆ *Section 2: Your Phone*
- ◆ *Section 3: Service*
- ◆ *Section 4: Safety and Warranty Information*

WARNING

Please refer to the **Important Safety Information** section on page 160 to learn about information that will help you safely use your phone. Failure to read and follow the **Important Safety Information** in this phone guide may result in serious bodily injury, death, or property damage.

Your Phone's Menu

The following table outlines your phone's menu structure. For more information about using your phone's menus, see "Navigating Through the Menus" on page 25.

Softkeys

From the Main screen, Options and Contacts are available using the softkeys.

Contacts (Right Softkey)
Options (Left Softkey)
<i>1: Main Menu</i>
<i>2: Personalize Carousel</i>
<i>3: Personalize Home Screen</i>
<i>4: Tutorial</i>
<i>5: Reset</i>
<i>6: About</i>

Main Menu

From the Main screen, navigate to the Home tile () and press  to access these Main menu items.

Contacts	
Messaging	
1: Messages	
2: Send Messages	
1: Text Message	2: Media Mail
3: Email	4: IM
3: Voicemail	
1: Call Voicemail	2: Clear Envelope
4: Media Mail	
1: Inbox	2: Sent Mail
3: Saved Mail	4: Pending
5: Email	
6: IM (AOL Instant Messenger, Windows Live Messenger, Yahoo! Messenger)	

7: Settings	
1: General	
1: Notification	2: Preset Messages
3: Message Alert	4: Auto-Erase
2: Text Message	
1: Save in Outbox	2: Priority
3: Call Back #	4: Edit Signature
My Stuff	
1: Application Manager	
2: Games	
1: Get New Games	2: My Stuff Manager Games
3: Asphalt	4: Elite Racing
3: Ringtones	
1: Get New Ringtones	2: My Stuff Manager Ringtones
4: Applications	
1: Get New Applications	2: My Stuff Manager Applications
3: Hookt	4: TeleNav Navigator
5: Wallpapers	
1: Get New Wallpapers	2: My Stuff Manager Wallpapers

6: Chat Flirt Fun
Re-Boost
Missed Alerts
Get Stuff
History
Web
Music
Bluetooth
<i>1: Pair with Hands Free</i>
<i>2: Send a Contact</i>
<i>3: Add a New...</i>
<i>4: Trusted Devices</i>
<i>5: More...</i>
1: Settings
1: On/Off 2: Visibility 3: My Device Name 4: My Device Info 5: Exchange Folders 6: Voice Priority
2: Block List

Pictures
1: Camera <i>Press the right softkey to view the following options:</i>
1: Selftimer
1: Off 2: 5 sec 3: 10 sec
2: Multi Shot
1: Series Shot (off/3/5/10) 2: Divided Shot (off/4/9/16)
3: Fun Tools...
1: Fun Frames 2: Color Tones
4: Controls...
1: Brightness 2: White Balance 3: Night Shot 4: Metering
5: Settings..
1: Resolution 2: Quality 3: Shutter Sound 4: Status Bar 5: Storage
6: Launch
1: Review Pictures 2: Camcorder

2: Camcorder (Video Mail/Long Video) <i>Press the right softkey to view the following options:</i>	
1: Selftimer	
1: Off 3: 10 sec	2: 5 sec
2: Fun Tools..	
1: Color Tones	
3: Controls..	
1: White Balance	
4: Settings..	
1: Quality 3: Video Length	2: Storage
5: Launch	
1: Review Pictures	2: Camera
3: Media Mail	
1: Inbox 3: Saved Mail	2: Sent Mail 4: Pending
4: My Albums	
1: In Phone 3: Online Albums	2: Memory Card

5: Settings and Info	
1: Auto Save to	
1: Phone	2: Memory Card
2: Status Bar (On/Off)	
3: Account Info	
Settings/Tools	
1: Settings	
1: Display	
1: Main Screen 3: Backlight 5: PowerSave Mode 7: Language	2: Brightness 4: Dialing Font Size 6: Keypad Light
2: Sounds	
1: Volume 3: Alerts	2: Ringtone Type 4: Key Tone
3: Bluetooth	
1: On/Off 3: My Device Name 5: Exchange Folders	2: Visibility 4: My Device Info 6: Voice Priority

4: Messages	
1: Notification	2: Message Reminder
3: Callback Number	4: Auto-Delete
5: Signature	6: Pre-set Message
7: Draft Alert	8: Priority
9: Save in Outbox	
5: Contacts	
1: Speed Numbers	2: Hide Secret
3: My Name Card	4: Services
6: Text Entry	
1: Auto-Capital	2: Auto-Space
3: Dual Language	4: Personal Dictionary
5: Used Word Dictionary	
6: Display Candidate	7: Prediction Start
8: Auto Word Insertion	
9: Help	
7: Phone Info	
1: Phone Number	2: Icon Glossary
3: Version	4: Advanced
8: More...	
1: Auto Keyguard	2: Accessibility
3: Airplane Mode	4: Browser
5: Call Setup	6: Data
7: Headset Mode	8: Location
9: Restrict and Lock	0: Security

2: Tools	
1: Alarm	
1: Alarm #1	2: Alarm #2
3: Alarm #3	
2: Calculator	
3: Tip Calculator	
4: Calendar	
1: Today	2: Scheduler
3: Task List	4: Countdown
5: Mass Storage	
1: Connect to PC	2: File Manager
3: Format Memory Card	
4: Memory Info.	
6: Memo Pad	
7: World Time	
8: Update Phone	
1: Update Firmware	2: Update PRL
9: Voice Memo	
1: Record	2: Review

0: Voice Service

- 1: Call <Name or #>
- 2: Send Text <Name or #>
- 3: Send Picture <Name or #>
- 4: Lookup <Name>
- 5: Go To <Menu>
- 6: Check <Item>

In Use Menu

While in an active call press **Mute/Unmute** (left softkey) to turn the microphone on or off.

In Use Menu

*While the call is active, press **Options** (right softkey) to display the following options:*

- 1: Save/Contact Details
- 2: 3-Way Call
- 3: Contacts
- 4: Voice Memo
- 5: Phone Info
- 6: Key Mute/Unmute
- 7: Messaging
- 8: Recent History
- 9: Tools
- 0: Whisper On/Off

Section 1

Getting Started

Setting Up Service

- ◆ *Setting Up Your Phone (page 8)*
- ◆ *Activating Your Phone (page 9)*
- ◆ *Setting Up Your Voicemail (page 10)*
- ◆ *Getting Help (page 10)*

Setting Up Your Phone

1. Install the battery. (See “Installing the Battery” on page 22.)
 - Press the cover release latch and remove the battery cover from the phone.
 - Insert the battery into the opening, making sure the connectors align. Gently press down to secure the battery.
 - Replace the cover by lining up the tabs and then firmly pressing the cover down until it snaps into place.
2. Press and hold  for two seconds to turn the phone on.
 - If your phone is activated, it will turn on, search for Boost service, and enter the One Click main screen (standby mode).
 - If your phone is not yet activated, see “Activating Your Phone” on page 9 for more information.

3. Make your first call.

- Use your keypad to enter a phone number.
- Press .

Note

Your phone's battery should have enough charge for your phone to turn on and find a signal, set up your voicemail, and make a call. You should fully charge your battery as soon as possible. See "Charging the Battery" on page 23 for details.

WARNING

If your handset has a touch-screen display, please note that a touch-screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch-screen may damage the tempered glass surface and void the warranty. See "Manufacturer's Warranty" on page 169.

Activating Your Phone

To activate your new phone, please refer to the included "Activation Kit" documentation.

For additional support information visit us at:
www.boostmobile.com

– or –

Call Boost Customer Care at **1-888-BOOST-4U**
(1-888-266-7848).

Welcome Sequence

After activation, the Welcome sequence guides you through an overview of the three high-level topics you should know prior to using your phone.

- **Carousel of Tiles:** The carousel of tiles at the bottom of the screen gives quick access to the things you use the most. You can add, remove, re-add and rearrange tiles as often as you want.
- **Home Screen:** The Home Screen can provide date and time at a glance. You can remove or re-add this Bubble.

- **Personalizing your phone:** To start personalizing your phone, click  or **Options** on the Home Screen.
- ▶ Follow the onscreen instructions to read through the information messages and exit the tutorial.

Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, it is recommended that you set up your voicemail and personal greeting as soon as your phone is activated.

1. While in the One Click main screen (standby mode), press and hold .
2. Follow the system prompts to:
 - Create your password.
 - Record your name announcement.
 - Record your greeting.

Note

Voicemail Password

If you are concerned about unauthorized access to your voicemail account, it is recommended that you enable your voicemail password.

Without a passcode, anyone who has access to your handset is able to access your voicemail messages. (Do not activate One-Touch Message Access.)

For more information about using your voicemail, see “Voicemail” on page 130.

Getting Help

Managing Your Account

You can go to ‘My Account’ on www.boostmobile.com to view your account information, recharge your account, or to make account changes. To log into ‘My Account,’ you will need your mobile phone number and the Account PIN number you set up at activation.

From Your Phone

- Dial **#225 (#BAL)** to check minute usage and account balance.

- Dial **#233 (#ADD)** to make a payment by calling the Re-boost automated system.
- Dial **#611** to access a summary of your service plan or get answers to other questions by contacting Boost Customer Care.

From Any Other Phone

- Call Boost Customer Care: **1-888-BOOST-4U (1-888-266-7848)**.

411 (Directory Assistance)

The 411 service provides you with up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.



Note

There is a per-call charge to use 411 and you will be billed for airtime. Visit www.boostmobile.com for additional details.

Some mobile phone features are dependent on either the capabilities of your phone and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality.

All features, functionality and other specifications, as well as the information contained in this user guide are based upon the latest available information and are believed to be accurate at the time of printing. Samsung reserves the right to change or modify any information or specifications without notice or obligation.

Section 2

Your Phone

Phone Basics

- ◆ *Your Phone (page 14)*
- ◆ *Viewing the Display Screen (page 18)*
- ◆ *Turning Your Phone On and Off (page 21)*
- ◆ *Using Your Phone's Battery and Charger (page 22)*
- ◆ *Navigating Through the Menus (page 25)*
- ◆ *Displaying Your Phone Number (page 26)*
- ◆ *Making and Answering Calls (page 26)*
- ◆ *Entering Text in Portrait Mode (page 34)*
- ◆ *Entering Text in Landscape Mode (page 39)*

Your Phone



Portrait Mode

Key Functions

1. **Earpiece** lets you hear the caller and automated prompts.
2. **Signal Strength Indicator** represents the signal strength by displaying bars. The more bars displayed, the better the signal strength.
3. **Display Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
4. **Navigation Key** scrolls through the phone's menu options.
5. **Softkey (left) Portrait Mode** lets you select softkey actions or menu items corresponding to the bottom left line on the display screen while the phone is in portrait mode.
6. **Speaker Key** lets you enable/disable speakerphone mode.
7. **TALK Key** () allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
8. **Keypad** lets you enter numbers, letters, and characters, and navigate within menus. Press and hold number keys for speed dialing.
9. **Microphone** allows other callers to hear you clearly when you are speaking to them.
10. **END/POWER Key** () lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to send the call directly to voicemail.
11. **BACK/Clear Key** deletes characters from the display in text entry mode. When in a menu, pressing  returns you to the previous menu. This key also allows you to return to the previous screen in a data session.
12. **Softkey (right) Portrait Mode** lets you select softkey actions or menu items corresponding to the bottom right line on the display screen while the phone is in portrait mode.
13. **MENU/OK** lets you access the phone's menus and selects the highlighted choice when navigating through a menu.

14. **Battery Strength Indicator** represents the amount of remaining battery charge currently available in your phone. When all bars display in the battery icon, the phone's battery is fully charged. When no bars display, the phone's battery is completely discharged or empty.
15. **Softkey (left) Landscape Mode** lets you select softkey actions or menu items corresponding to the bottom left line on the display screen while the phone is in landscape mode.
16. **Headset Jack** allows you to plug in either a stereo headset (sold separately) or an optional headset for convenient, hands-free conversations.
CAUTION! Inserting an accessory into the incorrect jack may damage the phone.
17. **Volume Button** allows you to adjust the ringtone volume in standby mode or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options.
18. **Softkey (right) Landscape Mode** lets you select softkey actions or menu items corresponding to the bottom right line on the display screen while the phone is in landscape mode.
19. **microSD Card Slot** lets you use a microSD card to expand the memory of your phone. To gain access to this slot, you must first remove the battery cover. (See "Installing the Battery" on page 22.)
20. **Cover Release Latch** lets you remove the battery cover and expose both the internal battery compartment and internal microSD card slot.
21. **Camera Lens**, as part of the built-in camera, lets you take pictures and videos.
22. **Charger/Accessories Jack** allows you to connect a compatible charging cable or USB data cable.
CAUTION! Inserting an accessory into the incorrect jack may damage the phone.
23. **Camera Button** lets you activate the camera and camcorder mode and take pictures and videos.

Landscape Phone Features



Landscape Mode

24. **Softkey (right) Landscape Mode** lets you select softkey actions or menu items corresponding to the bottom right line on the display screen while the phone is in landscape mode.
25. **Softkey (left) Landscape Mode** lets you select softkey actions or menu items corresponding to the bottom left line on the display screen while the phone is in landscape mode.

26. **QWERTY keyboard** provides an alphanumeric character keyboard layout.
27. **Fn (Function) Key** toggles to access the white numbers/symbols on the QWERTY keyboard.
28. **Shift Key** lets you toggle alphabet characters between mixed case, uppercase and lowercase. Character case remains as selected until the Shift key is pressed again.
29. **Symbol Key** lets you access symbol characters.
30. **Space Key** lets you add spaces between words and characters.
31. **Enter/OK Key** lets you perform the function highlighted in the current menu. Press to enter additional lines of text.
32. **End/Back Key** deletes characters from the display in text entry mode. When in a menu, pressing  returns you to the previous menu. This key also allows you to return to the previous screen in a data session.

Viewing the Display Screen

Your phone's display screen provides information about your phone's status and options. The following list identifies the symbols you'll see on your phone's display screen:

Tip To view a list of your phone's icons and descriptions, from the main menu select **Settings/Tools > Settings > Phone Info > Icon Glossary**.

Icon	Description
	Data connection status. (The icon is animated when service is active.)
	The data connection is active and data is being transmitted.
	The data connection is active and data is being received.
	The data connection is dormant (no data is being sent or received).
	Mobile broadband service is available.

Icon	Description
	Status of mobile broadband service communication.
	Mobile broadband connection is active and communicating.
	Mobile broadband service is dormant.
	The location feature is on.
	The location feature is off.
	Your phone is using SSL (Secure Sockets Layer) protocol for client/server communication.
	A microSD memory card is installed.
	You have missed an incoming call.
	You have a new Media Mail message.
	You have a new text message.

Icon	Description
	You have a new voicemail message.
	You have an event scheduled.
	An alarm event is active.
	You have a new message.
	The message is locked.
	Your phone is operating in TTY mode.
	The ringtone volume is set to vibrate.
	The ringtone volume is set and the vibrate option is checked.
	The ringtone volume is set or 1-Beep is selected.
	The ringtone is turned off and the vibrate option is not enabled (Silence Mode).

Icon	Description
	An alarm is set on your phone.
	A call is in progress.
	Your phone cannot find a signal.
	Current signal strength. (The more bars you have, the stronger your signal.)
	Battery charge level (icon shown is full).
	Low battery charge level.
	Key tones are muted.
	Speakerphone is enabled.
	Whisper mode is on. Whisper mode increases the microphone to its maximum level.
	The camera is enabled.

Icon	Description
	The camcorder is enabled.
	The camera's self-timer function is enabled.
	The white balance is set to Sunny. This is used for taking pictures or movies outdoors on sunny days.
	The white balance is set to Cloudy. This is used for taking pictures or movies outdoors on cloudy days.
	The white balance is set to Tungsten. This is used for taking pictures or movies indoors under normal lighting conditions.
	The white balance is set to Fluorescent. This is used for taking pictures or movies indoors under fluorescent lighting conditions.
	The white balance is set to Manual. This is used for taking pictures indoors or outdoors using your own custom settings.
	A video or voice memo is currently being recorded.
	A voice memo or video is paused.

Icon	Description
	A voice memo or video is playing.
	Files have been uploaded to an online album or folder.
	Bluetooth technology is active and enabled.
	A Bluetooth device is connected.
	A Bluetooth Headset is connected and visible.
	Bluetooth technology is hidden.

Turning Your Phone On and Off

Turning Your Phone On

- ▶ Press and hold  for two seconds.

Once your phone is on, it searches for a signal. When your phone finds a signal, it automatically enters standby mode – the phone's idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after a brief period of searching, the PowerSave feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In PowerSave mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Boost service by pressing any key (when your phone is turned on).

Tip

The PowerSave feature conserves your battery power when you are in an area where there is no signal.

Turning Your Phone Off

- ▶ Press and hold  for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Using Your Phone's Battery and Charger

WARNING

Use only Samsung-approved batteries and chargers with your phone. The failure to use a Samsung-approved battery and charger may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

Battery Capacity

Your phone is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 5.6 hours of continuous digital talk time.

At 5% of charge capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone sounds an audible alert and then turns off.

Note

Long backlight settings, searching for service, vibrate mode, browser use, and other variables may reduce the battery's talk and standby times.

Tip

Watch your phone's battery level indicator and charge the battery before it runs out of power.

Installing the Battery

1. Remove the battery cover by pressing the Cover Release Latch (1) and then carefully lifting the battery cover away from the phone (2).



2. Slide the battery into the compartment so that the tabs on the end align with the slots at the bottom of the phone, making sure to line up the gold contacts (3).



3. Gently press down on the battery until it snaps into place (4).
4. Replace the cover by lining up the tabs and then firmly pressing the cover down until it snaps into place. Check that the battery is properly installed before turning on the phone.

Removing the Battery

1. Follow step 1 from “Installing the Battery” on page 22.
2. Grip the battery at the top end (1) and pull it up and out (2).



WARNING

Do not handle a damaged or leaking Li-Ion battery as you may be burned.

Charging the Battery

Your phone's Li-Ion battery is rechargeable and should be charged as soon as possible so you can begin using your phone.

Tip

It is recommended that you completely charge your battery first before using your phone. This guarantees you begin using your phone with a fully charged battery.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off, and you will lose any information you were just working on. For a quick check of your battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon () blinks and the phone sounds a warning tone.

Always use a Samsung-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

Using the Phone Charger

- ▶ Plug the flat end of the charger/accessories jack into the phone's charger/accessories jack and the other end into an electrical outlet.



- A **red indicator light** means the battery is charging.
- A **charging icon** located in the top right corner of the display screen lets you know the battery is charging.
- A **green indicator light** means the battery is fully charged.

With the Samsung-approved Li-Ion battery, you can recharge the battery before it becomes completely run down.

- The battery charge state (charged/charging) is indicated on the phone's display screen. Four bars on the battery icon () indicate a fully charged battery.

Note *It takes about three hours to fully recharge a completely rundown (discharged) battery.*

Navigating Through the Menus

The navigation key on your phone lets you scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

Note *Your phone's One Click main screen gives you instant access to your favorite features. See "Navigating the Main Screen" on page 44 for complete details.*

To navigate through a menu, press the navigation key up or down. If you are in a first-level menu, such as **Settings**, you may also navigate to the next or previous first-level menu by pressing the navigation key right or left.

Selecting Menu Items

As you navigate through the menu using the navigation key () , menu options are highlighted. Select any option by highlighting it and pressing  . If the option is numbered, you can select it by pressing the corresponding number on the phone's keypad.

For example, to view your text messages:

1. While in the One Click main screen, highlight  and press  to access the main menu.
2. Select **Messaging** by highlighting it and pressing .
3. Select **Messages** by highlighting it and pressing . (If you have any text messages, they display.)
4. Highlight a message and press  to view the message text.

For the purposes of this guide, the above steps condense into:

- ▶ Highlight  and press  > *Messaging* > *Messages*.

Backing Up Within a Menu

To go to the previous menu:

- ▶ Press  or .

To return to standby mode:

- ▶ Press .

Displaying Your Phone Number

- ▶ Highlight  and press  > *Settings/Tools* > *Settings* > *Phone Info* > *Phone Number*. (Your phone number and other information about your phone and account displays.)

Making and Answering Calls

Making Calls

Placing a call from your wireless phone is as easy as making a call from any landline phone. Enter the number, press , and you're on your way to clear calls.

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press  or  to erase the numbers.)
3. Press  to initiate the call.
4. Press  when you are finished.

Tip

To redial your last outgoing call, press  twice.

You can also place calls from your phone by speed dialing numbers from your Contacts (page 34), using Voice Dial (page 92), and using your History listings (page 70).

Dialing Options

When you enter numbers in standby mode, you will see a variety of dialing options displayed as softkeys on the phone's screen.

To send a message to the number, press **Send Msg** (left softkey).

– or –

To initiate a dialing option, press **Options** (right softkey) and choose one of the following options.

- **Contact Details** to display the details for a Contact if the entered number matches a previously created entry.
- **Save** to enter a seven-digit or ten-digit number (phone number and area code) and press **Options > Save** to save the phone number in your Contacts. (See “Saving a Phone Number” on page 31.)
- **Hard Pause** to enter digits and then use this feature to enter a hard pause within a number string (the phone waits for your input). To continue dialing, you must press the  key. (See “Dialing and Saving Phone Numbers With Pauses” on page 32.)

- **2sec Pause** to enter digits and then use this feature to enter a 2 second delay within a number string (the phone continues dialing after 2 seconds without any additional keys being pressed). (See “Dialing and Saving Phone Numbers With Pauses” on page 32.)

Tip

To speed dial a phone number from standby mode, press and hold the speed dial number. If the speed dial number is two digits, enter the first digit, and then press and hold the second digit. (For information on setting up speed dial numbers, see “Assigning Speed Dial Numbers” on page 76.)

Answering Calls

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press  to answer an incoming call. (Depending on your settings, you may also answer incoming calls by pressing any number key. See “Call Answer Mode” on page 63 for more information.)

Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name displays. The caller's phone number may also display, if available.

If Call Answer is set to **Talk Key** (see "Call Answer Mode" on page 63), the following options are also display. To select an option, press the corresponding softkey.

- **Silence** (left softkey) to mute the onboard speaker and temporarily silence the ringtone.
- **Ignore** (right softkey) to send the call to your voicemail box.

Note To quiet the ringtone, press **BACK**, or press the volume button.

Missed Call Notification

When an incoming call is not answered, the Missed Call log displays on your screen.

To display the Missed Call entry from the notification screen:

- ▶ Select the entry from the Missed Alerts screen and press **MENU OK**. (To dial the phone number, press **CALL**.)

To display a Missed Call entry from standby mode:

1. Highlight **HOME** and press **MENU OK** > **Missed Alerts**.
2. Select the entry you wish to view and press **MENU OK**.

Calling Emergency Numbers

You can place calls to 911 (dial **9 WXYZ** **1** **1** **1** **1**), even if your phone is locked or your account is restricted.

Note When you place an emergency call, your phone automatically enters Emergency mode.

To exit Emergency mode:

1. Press **CALL** to end a 911 call.

Note When you are in Emergency mode, you can exit by pressing **# Space** then pressing *** Shift**.

To deactivate the Emergency call in standby mode:

- ▶ Press **# Space** *** Shift** until Emergency mode is exited.

Enhanced 911 (E911) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your phone seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

Important

Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your phone.

In-Call Options

Pressing **Options** (right softkey) during a call displays a list of available in-call features. To select an option, press the corresponding keypad number or select the option and press . The following options may be available through the Options menu:

- **Contact Details** to view the contact's details (if the caller is saved to your Contacts list).
- **Save** to add a new number to your Contacts list, if the caller is not already saved to your Contacts list.
- **3-Way Call** allows you to talk to two different people at the same time. (For more information, see "Making a Three-Way Call" on page 135.)
- **Contacts** accesses the Contacts menu.
- **Voice Memo** allows you to record incoming audio from your conversation. (For more information, see "Managing Voice Memos" on page 97.)

Note

Please make sure to secure permission prior to recording the other party's voice during a call.

- **Phone Info** displays the following menu options:
 - **Phone Number** - your phone number.
 - **Icon Glossary** - a list of currently available icons.
 - **Version** - phone software version.
 - **Advanced** - additional technical information.
- **Key Mute/Unmute** allows you to mute the key tones from being heard by the caller.
- **Messaging** accesses the Messaging menu options.

- **Recent History** checks your call log for Recent calls. You can also erase the logs from this menu.
- **Tools** accesses the Tools menu options.
- **Whisper On/Off** increases the microphone to its maximum level. During a call turn on **Whisper On** when speaking softly or when the caller cannot hear your voice clearly. This mode is useful in meetings or public places. Return the phone back to normal operation by selecting **Whisper Off**.

Press **Mute** (left softkey) during a call to mute the microphone. Press **UnMute** (left softkey) to unmute the microphone.

- While muted, the word **Mute** blinks on the upper-right portion of the main display screen.

Using the Speakerphone

To use your phone hands-free or to share a call with other people:

1. Place your phone in Speaker Mode by pressing the Speakerphone Key () until “Entering speaker mode” appears in the display.

WARNING

Because of higher volume levels, do not place the phone near your ear during speakerphone use.

2. To disable Speaker Mode, press  until “Exit speaker mode” appears in the display.

End-of-Call Options

After you receive a call from or make a call to a phone number that is not in your Contacts, the phone number and the duration of the call display. Press **Options** (right softkey) > **Save** to add the new number to your Contacts. (See “Saving a Phone Number” on page 31.)

After you receive a call from or make a call to a phone number that is already in your Contacts, the entry name, phone number, and the duration of the call display.

Note

The End-of-Call options do not display for calls identified as No ID or Restricted.

Saving a Phone Number

The Contacts list can store a maximum of 600 contact entries in total, with each contact entry containing a maximum of seven phone numbers. Each entry's name can contain up to 64 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see "Contacts" on page 74.)

To save a number from standby mode:

1. Enter a phone number and press .
2. Select **New Entry** or **Existing Entry** and press .
3. Select a label (**Mobile**, **Home**, **Work**, **Pager**, **Fax**, or **Others**) and press .
4. Use the keypad to enter the new contact name. (See "Entering Text in Portrait Mode" on page 34 or "Entering Text in Landscape Mode" on page 39.)
– or –
Search for an existing contact name and press 
to save the new number.
5. Press **Done** (left softkey) to save the entry. You are then notified if the number was successfully added.

Note

Information can also be entered while the phone is in landscape mode (page 39).

Finding a Phone Number

You can search your entries for phone numbers that contain a specific string of numbers.

1. Enter four or more of the last digits in standby mode. (The more numbers you enter, the more specific the search becomes.)
 - Matching Contacts entries display within an onscreen list.
2. To display the Contacts entry that contains the phone number you entered, select the entry and press 
– or –
To dial the number, highlight the entry from the list and press .

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **Hard Pause** sends the next set of numbers when you press . (This is indicated with a **P** within the number sequence.)
- **2sec Pause** automatically sends the next set of numbers after two seconds. (This is indicated with a **T** within the number sequence.)

Note You can have multiple pauses in a phone number and combine two-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter the phone number.
2. Press **Options** (right softkey) > **Hard Pause** or **2sec Pause**.
3. Enter additional numbers.
4. Press  to dial the number.

– or –

Press **Options** (right softkey) > **Save** to save the number in your Contacts.

Note When dialing a number with a hard pause, press  to send the next set of numbers.

Plus (+) Code Dialing

When placing international calls, you can use Plus Code Dialing to automatically enter the international access code for your location (for example, 011 for international calls placed from the United States).

Note When you are calling from the United States, dial "011", then the country code and phone number.

To make a call using Plus Code Dialing:

1. Press and hold  until a "+" appears on your phone display.
2. Dial the country code and phone number you're calling and press . (The access code for international dialing will automatically be dialed, followed by the country code and phone number.)

Using Abbreviated Dialing

Abbreviated Dialing is similar to speed dialing. You can use either of the following abbreviated dialing features.

- **Contacts Match** – Retrieve any number saved in your Contacts by entering only the last four to six digits of the number.
- **Abbreviated Dialing** – Prepend the first five or six digits (for example, the area code and prefix) to any four or five digits you enter. Press  to dial the resulting number.

Note

You must first activate the Call Match and/or Abbreviated Dialing Settings to use these features. For more information, see “Setting Abbreviated Dialing” on page 63.

To place a call using Contacts Match Abbreviated Dialing:

1. Enter the last four to six digits of a Contacts entry’s phone number.
2. Press  to call the displayed number.
 - If there is more than one matched number in your Contacts, the Abbrev. Dial list displays. Select the

name you want to call from the list, and then press  to place a call.

To place a call using Prepend Abbreviated Dialing:

1. Enter the last four to five digits of the number.
2. Select the **Abbrev. Dial** entry from the screen and press .

Dialing From the Contacts List

1. Highlight  and press  > **Contacts**.
– or –
Press **Contacts** (right softkey) from the main menu.
2. Select the entry you want to call and press  to dial the entry’s default phone number.
– or –

To dial another number from the same entry, select the name, press , and then select a number and press .

Using Speed Dialing

You can store up to 98 numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a button or two. With this feature, you can dial speed dial entries using one keypress for locations 2–9 or two keypresses for locations 10–99.

To use One-Touch Dialing for speed dial locations 2–9:

- ▶ Press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows the calling animation.

To use Two-Touch Dialing for speed dial locations 10–99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. The display confirms that the number has been dialed when it shows the calling animation.

Entering Text in Portrait Mode

Your phone provides convenient ways to enter letters, numbers, and symbols whenever you are prompted to enter text.

In this section we'll cover the steps necessary to enter text while the phone is in portrait mode where the keypad is the primary method of both text and character entry.

Selecting a Text Input Mode

- ▶ From a screen where you can enter text, press **Options** (right softkey) > **Text Mode** to change the text input mode.
 - **T9(English)** to enter text using a predictive text system that reduces the number of keypresses required while entering a word. (See page 35.)
 - **Alpha** to cycle through the alpha characters associated with the letters on the keypad. (See page 36.)
 - **Symbols** to enter symbols. (See page 37.)

- **Number** to enter numbers by pressing the numbers on the keypad. (See page 37.)
- **Text Options** to configure these options: *Auto-Capital, Used words, Display Candidate, Prediction Start, Dual Language, Auto-Space, and Auto Word Insertion* (see page 38).

Tip

When entering text, press the * (Shift) key to change letter capitalization (abc > Abc > ABC).

Selecting a Text Message Option

1. From a messaging screen where you can enter text, press **Options** (right softkey).
2. Select one of the following options:
 - **Add Preset Message** to enter preprogrammed messages. (See page 37.)
 - **Add Signature** to set up a signature that will be appended to the end of all text messages you send.
 - **Add/Change Recipients** to return to the Send to page and either add or change any previously chosen recipients.

- **Insert Smiley** to insert an emoticon to indicate emotion.
- **Mark as Urgent** to set a priority level of Urgent to the outgoing message. This notifies any recipient of the urgent read status for the outgoing message.
- **Set Callback #** to set the callback number seen by text message recipients.
- **Save as Draft** to store the current message as a draft for later modification and delivery.

For complete information on text messaging, see “Text Messaging (SMS)” on page 132.

Entering Text Using T9 Text Mode

T9 Text Mode lets you enter text by pressing keys just once per letter.

T9 Text Input uses an intuitive word database to analyze the letters you enter and create a suitable word. (The word may change as you type.)

1. From a screen where you can enter text, press **Options** (right softkey) > **Text Mode** to change the text input mode.
2. Select the **T9(English)** text input mode.

3. Press the corresponding keys once per letter to enter a word. (For example, to enter the word “Bill,” press **2 ABC** **4 GHI** **5 JKL** **5 JKL**.) (If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to erase an entire word.)

- To get the uppercase **B** in the above example, press *** Shift** until the capitalization indicator displays **T9WORD**. This keeps the word with only an initial uppercase.
- If the word you want does not display after you have entered all the letters, press **0 Next+** to display additional word selections.
- To accept a word and insert a space, press **# Space**.

Adding a Word to the T9 Database

If a word you want to enter does not display as an option when you are using T9 Text Input, add it to the database by selecting the Alpha mode.

1. Select the **Alpha** text input mode. (See “Selecting a Text Input Mode” on page 34.)
2. Enter the word using **Alpha** Mode. (See “Entering Text Using Alpha Mode” on page 36.) The word

will appear as an option the next time you scroll through options during T9 Text Input.

For more information about T9 Text Input, visit the Nuance Web site at www.nuance.com/T9/textinput/.

Entering Text Using Alpha Mode

1. Select the **Alpha** mode. (See “Selecting a Text Input Mode” on page 34.)
2. Press the corresponding keys repeatedly until the correct letter appears. (For example, to enter the word “Bill,” press **2 ABC** twice, **4 GHI** three times, **5 JKL** three times, and **5 JKL** three times again.)

(If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to erase an entire word.)

By default, the first letter of an entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key. Characters scroll in the following order:

Key	English Sequence	
	Upper Case	Lower Case
1	., @ 1 ? ! * # /	
2 ABC	A B C 2	a b c 2
3 DEF	D E F 3	d e f 3
4 GHI	G H I 4	g h i 4
5 JKL	J K L 5	j k l 5
6 MNO	M N O 6	m n o 6
7 PQRS	P Q R S 7	p q r s 7
8 TUV	T U V 8	t u v 8
9 WXYZ	W X Y Z 9	w x y z 9
0 Next +	0	
* Shift	One-character-shifted	
# Space	Space	

Note

When selecting Dual Language, Spanish characters are also added to those listed above.

Entering Numbers, Symbols, Emoticons, and Preset Messages

To enter numbers:

- ▶ Select the **Number** mode and press the appropriate key. (See “Selecting a Text Input Mode” on page 34.)

To enter symbols:

- ▶ Select the **Symbols** mode. (See “Selecting a Text Input Mode” on page 34.) To enter a symbol, press the appropriate key indicated on the display.

To enter Smileys:

- ▶ From a screen where you can enter text, press **Options** (right softkey) > **Insert Smiley**. (See “Selecting a Text Message Option” on page 35.) Press the number corresponding to the desired smiley.

To enter preset messages:

1. From a screen where you can enter text, press **Options** (right softkey) > **Add Preset Message**. (See “Selecting a Text Message Option” on page 35.)

2. Select a message and press .

Note

Preset messages make composing text messages easier by allowing you to enter quick messages, such as "Meet me at," "Give me a call," or a customized message of your own. (For more information on preset messages, refer to the User Guide.

Setting Text Options

The Text Options menu allows you to specify more automated features during the text entry process. These options can help streamline the text entry process by correcting for capitalization, spelling, spacing, and completing the most commonly entered words for you.

To specify text options:

1. When you display a screen where you can enter text, press **Options** (right softkey) > **Text Mode** > **Text Options** and then use your navigation key to scroll down the list and activate the desired text entry options:

- **Auto-Capital** allows you to turn on or off the capitalization of the next character after a full stop punctuation is followed by a space.
- **Used words** allows you to use the entire static database (included) plus learn and promote new or frequently used words.
- **Display Candidate** allows the phone to display predicted words, either one at a time or as a list.
- **Prediction Start** allows you to configure the phone to display possible word candidates after a preset number of characters have been entered. You can choose the feature to begin after the 2nd, 3rd, 4th, or 5th letters.
- **Dual Language** allows you to select word candidates to display in English only (**None**) or in Spanish (**Spanish**).
- **Auto-Space** allows you to turn on or off the ability to insert a space automatically after a word is selected from the candidate list.
- **Auto Word Insertion** allows you to turn on or off the ability to insert predictive words into the text.

2. When you have completed making your changes to these options, press  or press **Close** (right softkey) to go back to the previous screen.

Note

You can also access *Text Entry* options from the *Settings* menu. Press **Menu** > **Settings/Tools** > **Settings** > **Text Entry**.

Entering Characters In Dual Language

By enabling the Dual Language text option, you can use the keys for both English and Spanish text entry. If the *Display Candidate* and *Prediction Start* text options are enabled, the available word choices presented are from both language sets (English/Spanish).

To enter characters in dual language mode:

1. When you display a screen where you can enter text, press **Options** (right softkey) > **Text Mode** > **Text Options** > **Dual Language**.
2. Select **Spanish** and press . (See “Setting Text Options” on page 38.)

To disable dual language mode:

1. When you display a screen where you can enter text, press the **Options** (right softkey) > **Text Mode** > **Text Options** > **Dual Language**.
2. Select **None** and press .

Entering Text in Landscape Mode

Accessing the QWERTY Keyboard

The Samsung Rant™ has a built-in keyboard, referred to as a QWERTY keyboard. The keyboard is located beneath the display screen and is accessed by sliding it open. This orients the phone's display to landscape (widescreen) mode.

Using the QWERTY keyboard, you can type letters, numbers, punctuation, and other special characters into text entry fields or other applications simpler and faster than using the telephone keypad.

To open the phone and access the keyboard:

1. Rotate the phone 90 degrees counter-clockwise.

2. Slide the top section of the phone up to open, as shown in the illustration on the following page. When you slide the phone open, the display rotates from a vertical viewing mode (portrait) to a horizontal viewing mode (landscape).



Navigation and Options in Landscape Mode

Just as the screen orientation is changed, so is the functionality of both the softkeys and the navigation key.

The left and right softkeys above the keypad are deactivated and their functionality is transferred to the two keys located below the landscape screen (shown adjacent).

The Up/Down/Left/Right options of the navigation key are also adjusted when the phone changes from portrait to landscape modes.



Portrait Mode



Landscape Mode

Entering Text Using the QWERTY Keyboard

In this section we'll cover the steps necessary to enter text using the QWERTY keyboard. Using your phone's QWERTY keyboard is just like using any standard computer keyboard.

Tip

Selecting text input modes and options in landscape mode is the same as in portrait mode (page 34). From any text entry screen, press **Options** (right softkey) and select from the available options.

The keyboard provides dual-use keys labeled with alphabetic characters, and numbers or symbols. Press the key(s) corresponding to the character you want to enter.

The following keys perform special functions when entering text:

	Function: Allows you to use characters displayed at the top of the QWERTY keys. Examples: \$, @, #, !
---	--

	Shift: Converts the alphabetic character into uppercase. Changes the text input mode to Upper/Lower case mode.
	Sym: Launches the Symbols page. Choose from a list of symbols.
	Space: Inserts an empty space.
	OK/Enter: Accepts a change or option. While entering text, moves the insertion point to the next line in a message, like the Enter key on a computer keyboard.
	Back: Deletes the previous character, similar to the backspace key on a computer keyboard.

Entering Characters

Entering Uppercase and Lowercase Letters

1. Press  to make the next character uppercase. Characters revert back to lowercase after the next character is typed.
2. Press the corresponding text keys.

- For example, to enter the word “Bill,” type the keypad sequence below. If you make a mistake, press **BACK** to erase a single character.
- Press and hold **BACK** to erase an entire word.



B i l l

- To enter all uppercase characters, press **shift** before each letter, or press **shift** twice to lock the keyboard in uppercase mode.



BILL

Entering Numbers and Symbols

Numbers and symbols can be input by using **Fn** in conjunction with the correct number key.

1. Position the cursor where you want the symbol to appear within your message.
2. Press **Fn** to activate Function mode.

Note Press **Fn** twice to lock the keyboard in Fn mode.

3. Press the corresponding keys. (For example, to enter “9:30,” you would use the keyboard sequence shown below. If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to erase an entire word.)



9:30

Entering Symbols with the SYM key

Some symbols are entered by pressing the **sym** key to access the Symbols page and then pressing the number key corresponding to a symbol.

To enter symbols:

1. Position the cursor where you want the symbol to appear within your message.
2. Press **sym** and press the number key corresponding to the desired symbol to insert it.



Ted's

Navigating the Main Screen

- ♦ *Getting to Know One Click (page 44)*
- ♦ *Personalizing the Carousel (page 46)*
- ♦ *Personalizing the Home Screen (page 49)*

Getting to Know One Click

One Click brings all your favorite features to your fingertips. Instead of navigating through the levels of a traditional phone menu, this design puts the things you need the most – features like text messaging, Internet access, and GPS navigation – right up front. Not only can you access what you need right away, you get to choose what and where it all goes.

Using the One Click main screen is easy once you've learned a few basics.

The One Click Main Screen



The illustration above shows the basic layout of your phone's main screen, also known as the standby screen. The call outs highlight what you'll need to know to get started with One Click.

- **Carousel** – The carousel is the bottom row of *tiles*, or icons, on your main screen. Pressing the *navigation key* right or left moves the carousel. The tile in the center is the menu that's displayed. In the illustration, the *Home* tile () is in the center, so the Home screen is displayed.
- **Tiles** – The tiles are the individual icons on the carousel. Each tile displays a specific menu, such as Messaging, Web, and Favorite Shortcuts. You have 18 tiles to choose from, 10 of which are default tiles you can add, remove and rearrange to suit your needs.
 - The *Home* tile () provides access to the phone's full menu, and it is the only one that cannot be moved or removed.
 - Tiles are created via personalization of the Carousel via Options menu.
- **Bubbles** – Bubbles are at-a-glance information items that may display when the Home screen displays, such as in the illustration. Your Home screen can display the Date and Time bubble.
 - Bubbles are created via personalization of the Home Screen via Options menu.
- **Function Keys** – The keys you'll use to navigate through the main screen are:
 - **Navigation key:** Press right or left to move the carousel to select tiles. Selected tiles occupy the center position. Press the navigation key up or down to highlight bubbles (Home screen only) or menu items.
 - **Menu/OK key** (): Press to select highlighted menu items. From the Home () screen, press to display the phone's full menu. (When in landscape mode, the *Enter/OK key* performs these functions.)
 - **Softkeys:** Press the left or right softkey to perform the action or access the menu indicated by the text directly above it on the display. In the illustration, pressing the left softkey displays *OPTIONS*, and pressing the right softkey displays *CONTACTS*.
 - **End/Power key** (): Press from any menu or tile to return to the Home () screen.

Take the Tutorial

Your phone has a built-in menu of tutorials to teach you all you need to know about One Click.

1. Highlight  and press **OPTIONS** (left softkey) > **Tutorial**.
– or –
Select  (**Personalize**) > **Tutorial**.
2. Highlight a topic and press  to display a tutorial. Topics include:
 - Getting Started
 - Changing the Carousel (Adding a Tile, Removing a Tile)
 - Changing the Home Screen (Adding a Bubble, Removing a Bubble)

Personalizing the Carousel

Now that you know what the carousel is, it's time to make it work for you by adding, removing, or rearranging tiles to match how you want to use your phone.

Adding a Tile to the Carousel

1. Highlight  and press **OPTIONS** (left softkey) > **Personalize Carousel**.
2. Press **ADD TILE** (left softkey), select a tile category (**All**, **Communicate & Tools**, **Entertainment & Games**, or **Travel & Weather**), and then highlight a tile (see table on page 46).
3. To add the tile, press **ADD** (left softkey) or press . (To view a preview, press **PREVIEW** [right softkey].)
4. Press the navigation key left or right to decide on its new location on the carousel and press **INSERT** (left softkey).

Note The following table shows a sample of the tiles that may be available on your phone.

One Click Tiles	
	Home – View Home screen and bubbles. Press  to access the phone's full menu.
	Messaging – Access Voicemail, Send Messages, Text Message, Media Mail, IM and Email. See “Service Features: The Basics” on page 130.

One Click Tiles	
	Favorites – Add and access up to five shortcuts from My Stuff, My Album, Bookmark, and other Menu Items. See “Phone Setup Options” on page 62.
	Re-Boost - Allows you to add money to your account.
	Facebook - Access the global social networking website.
	Navigation – Access Navigation, including Drive To, Search, Maps & Traffic, and Share & More. See “GPS Navigation” on page 157.
	HOOKE - Access an interactive, geographically localized and interest-categorized mobile community that communicates across multiple wireless platforms and incorporates e-mail, IM, picture profiles, presence, and public and private messaging lounges.
	Personalize – Access Change Wallpaper, Change Ringtone, Personalize Home Screen, Personalize Carousel, and Tutorial. See “Personalizing Your Phone” on page 51.

One Click Tiles	
	Get Stuff - Purchase Ringtones, Games, Applications, Chat, Flirt, Fun, and My Stuff.
	Web - Access data services, including the Boost home page, Bookmarks, Recent Pages, Enter Web Address menu, and search. See “Launching a Data Connection” on page 139.
	Accuweather - Access Weather Radar, Forecast information, Storm Center and News.
	Games - Access exciting games on the go.
	Glu Mobile - Access high-quality, fresh entertainment created exclusively for mobile phones.
	Movies - Access movie times and tickets, news and more.
	MySpace - Access a social networking site where you can connect with other people, share photos, bulletins, and more.
	Namco -Download wireless games and content that provide instant fun on the go.

One Click Tiles	
	Things To Do - Get movies, food and drink, events & tickets, directions and more.
	Yahoo! - Access your favorite Yahoo services.

Removing a Tile From the Carousel

1. Highlight  and press **OPTIONS** (left softkey) > **Personalize Carousel**.
2. Press the navigation key right or left to select a tile, and then highlight **Remove Tile** and press .
3. Select **Yes** and press .

Shortcut

From the main screen, select a tile and press **OPTIONS** (left softkey) > **Remove Tile** > **Yes**. Remember that you cannot remove, move, or replace the Home tile.

Rearranging Tiles on the Carousel

1. Highlight  and press **OPTIONS** (left softkey) > **Personalize Carousel**.

2. Select an existing tile and press **OPTIONS** (left softkey) > **Move Tile** and press .
3. Press the navigation key right or left to select a new location, and then press **INSERT** (left softkey) or press  to place the tile.

Shortcut

From the main screen, select a tile, press **OPTIONS** (left softkey) > **Move Tile**, and then complete step 3.

Replacing Tiles on the Carousel

If your carousel is full or if you just want to swap out one tile for another, you can replace an existing tile with another.

1. Highlight  and press **OPTIONS** (left softkey) > **Personalize Carousel**.
2. Select an existing tile and press **OPTIONS** (left softkey) > **Replace Tile** and press .
3. Select a tile category and then highlight a tile.
4. To replace the previous tile, press **REPLACE** (left softkey) or press  to place the tile.

Shortcut

From the main screen, select a tile, press **OPTIONS** (left softkey) > **Replace Tile**, and then complete steps 3 and 4.

Editing Tiles

Certain tiles, such as Favorites, contain editable content. You can use the Personalize Carousel menu to edit these tiles.

1. Highlight  and press **OPTIONS** (left softkey) > **Personalize Carousel**.
2. Select an existing tile and press **OPTIONS** (left softkey) > **Edit Tile** and press .
3. Use your navigation key and function keys to edit the tile.

Shortcut

From the main screen, select a tile, press **OPTIONS** (left softkey) > **Edit Tile**, and then complete step 3.

Resetting the Carousel

To reset the carousel to the original default settings:

1. Highlight  and press **OPTIONS** (left softkey) > **Reset**.
2. Highlight **Yes** and press .

Personalizing the Home Screen

Use your Home screen (the screen that displays when the **Home**  icon is selected) to provide at-a-glance information and updates through customizable bubbles. You can only add one bubble to your Home screen.

To see more information from a bubble, press the navigation key up or down to highlight the bubble and then press .

Adding a Bubble to the Home Screen

1. Highlight  and press **OPTIONS** (left softkey) > **Personalize Home Screen**.

2. Press **ADD** (left softkey) and then highlight a bubble (see table on page 50).
3. To add the bubble, press **ADD** (left softkey) or press . (To view a preview, press **PREVIEW** [right softkey].)
4. If prompted, follow the instructions to select and personalize your bubble.
5. When you are finished, press **INSERT** (left softkey) or .

One Click – Home Screen Bubbles



Date and Time – view the current date and time right on your standby screen.

Removing a Bubble From the Home Screen

1. Highlight  and press **OPTIONS** (left softkey) > *Personalize Home Screen*.
2. Press the navigation key left or right to select the *Remove Bubble* option and press .

Settings

- ◆ *Personalizing Your Phone (page 51)*
- ◆ *Sound Settings (page 52)*
- ◆ *Display Settings (page 55)*
- ◆ *Location Settings (page 58)*
- ◆ *Messaging Settings (page 58)*
- ◆ *Airplane Mode (page 61)*
- ◆ *TTY Use (page 61)*
- ◆ *Phone Setup Options (page 62)*
- ◆ *Security Settings (page 64)*

Personalizing Your Phone

Your phone can be personalized via the onscreen carousel.

To change the Wallpaper:

1. Highlight  > *Change Wallpaper* and press .
2. Select *Preload Images*, *My Stuff*, or *My Albums* and press .
3. Press the navigation key left or right to view available images.
4. Press *Assign* (left softkey) to assign an image.

To change the Ringtone:

1. Highlight  > *Change Ringtone* and press .
2. Follow the onscreen instructions for setting a Ringtone. See “Sound Settings” on page 52.

Sound Settings

Ringtone Types

Ringtones help you identify incoming calls and messages. You can assign ringtone types to individual Contacts entries, types of calls, and types of messages.

- **Downloaded Ringtones** can be downloaded right to your phone.
- **Preprogrammed Ringtones** include a variety of standard ringtone types and familiar music.
- **Vibrating Ringtones** alerts you to calls or messages without disturbing others.

Selecting Ringtone Types for Voice Calls

Your phone provides a variety of ringtone options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Sounds* > *Ringtone Type* > *Incoming Calls*.

2. Select *With Caller ID* or *Without Caller ID*. (A list of ringtone type categories displays.)
3. Select a category, and then use your navigation key to scroll through the available ringtones. A sample ringtone will sound as you highlight each option.
 - Categories include: *Ringtones*, *Melodies*, *My Stuff*, or *My Videos*.
4. Press  to assign a ringtone.

Getting New Ringtones

A wide variety of new ringtones is available from Boost, and you can access them right from your phone. (Additional charges may apply, but some are free.)

1. Highlight  and press  > *My Stuff* > *Ringtones* > *Get New Ringtones*.
 - or –Select  > *Get Ringtones* and follow the system prompts.
2. Follow the system prompts to purchase and download ringtones.

Selecting Ringtone Types for Messages

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Sounds* > *Ringtone Type* > *Messages*.
2. Select *Voicemail*, *Text Message*, or *Media Mail*. (A list of ringtone type categories display.)
3. Select a category, and then use your navigation key () to scroll through the available ringtones. A sample ringtone will sound as you highlight each option.
4. Press  to assign a ringtone.

Selecting Ringtone Types for Scheduled Events

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Sounds* > *Ringtone Type* > *Schedule*.
2. Select a category, and then use your navigation key () to scroll through the available ringtones. A sample ringtone will sound as you highlight each option.
3. Press  to assign a ringtone.

Adjusting the Phone's Volume Settings

Adjust your phone's volume settings to suit your needs and your environment.

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Sounds* > *Volume*.
2. Select *Ringtone*, *Earpiece*, *Headset*, *Speakerphone*, or *Advanced...*
3. Using the Volume key, choose a volume level and press .

Tip

You can adjust the ringtone volume in standby mode (or the earpiece volume during a call) by using the volume key on the left side of your phone.

Adjusting the Advanced Volume Settings

Adjust your phone's other advanced volume settings to suit your needs and your environment.

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Sounds* > *Volume* > *Advanced...*
2. Highlight *Alarm*, *Applications*, *Text Message*, *Media Mail*, or *Voice Mail* and press .

Note

Repeat these same processes to adjust the **Applications > Volume and Game Vibration** settings.

3. Use the navigation key to select **Use Ringtone Volume** (to use the ringtone volume setting).
– or –
Use the navigation key to select **Separate Volume** (to use a volume setting that is different from the ringtone volume setting).
4. If you select **Separate Volume**, press **Vibrate** (left softkey) if you wish the phone to always vibrate in addition to ringing at the selected volume setting.
5. Press  to store your new settings.

Vibrate All

The Vibrate All option allows you to mute all sounds and activate the vibration feature for all activities without turning your phone off.

To activate Vibrate All:

- ▶ Press and hold the volume button down in standby mode until the screen displays “Vibrate All.”

To deactivate Vibrate All:

- ▶ Press the volume button up repeatedly to select a volume level.

Silence All

The Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

- ▶ Press and hold the volume button down in standby mode until the screen displays “Silence All.”

To deactivate Silence All:

- ▶ Press the volume button up repeatedly to select a volume level.

Alert Notification

Set your phone to alert you with an audible tone when you change service areas, once a minute during a voice call, or when a call has been connected.

1. Highlight  and press  > **Settings/Tools > Settings > Sounds > Alerts.**

- Highlight an alert type and press .
 - Select *Minute Beep*, *Service*, *Connect*, *Signal Fade/Call Drop*, *Power On*, or *Power Off*.
- Highlight *On* or *Off* and press .

Selecting a Key Tone

Your phone offers a number of options for selecting the audible tones accompanying a keypress.

- Highlight  and press  > *Settings/Tools* > *Settings* > *Sounds* > *Key Tone*.
- Highlight an option and press .
 - Tone Type** to select the sound of a keypress.
 - Tone Volume** to select a keypress volume level.
 - Tone Length** to select a key tone length. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)
- Highlight an available option and press .

Display Settings

Changing the Backlight Time Length

Select how long the display screen remains backlit after any keypress is made.

- Highlight  and press  > *Settings/Tools* > *Settings* > *Display* > *Backlight*.
- Highlight a time setting and press .
 - Select *Slide open*, *30 seconds*, *15 seconds*, or *8 seconds*.

Note

Long backlight settings reduce the battery's talk and standby times.

Changing the Keypad Time Length

Select how long the keypad remains backlit after any keypress is made.

- Highlight  and press  > *Settings/Tools* > *Settings* > *Display* > *Keypad Light*.
- Highlight a time setting and press .

- Select *Slide open, 30 seconds, 15 seconds, 8 seconds* or *Off*.

Note

Long keypad settings reduce the battery's talk and standby times.

Changing the Display Screen

Choose what you see on the display screen while powering on or off and when in standby mode.

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Display* > *Main Screen* > *Wallpapers*. (A list of available images displays.)
2. Highlight *Preload Images*, *My Stuff*, or *My Albums* and press .
3. Highlight an image and press  to view it. (Once an image displays, use your navigation key to scroll through and view other available images.)
4. Press *Assign* (left softkey) to assign an image.

Changing the Brightness

Adjust your screen's contrast (brightness) to suit your surroundings.

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Display* > *Brightness*.
2. Press your navigation key left or right to adjust the screen contrast and press .

Activating the PowerSave Mode

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Display* > *PowerSave Mode*.
2. Select *On* or *Off*, and press .

Changing the Phone's Menu Style

Choose the layout of your phone's menu.

1. Highlight  and press .
2. Press the left softkey to cycle thru the available menu styles.
 - *LIST VIEW* to display the menu as a list.
 - *GRID VIEW* to view the menu as a grid.

Display Language

You can choose to display your phone's onscreen menus in English or in Spanish.

1. Highlight  and press  > *Settings/Tool* > *Settings* > *Display* > *Language*.
2. Highlight *English* or *Español* and press .

Changing the Dialing Font

Adjust the font when entering text (for example, when using the notepad or when adding a Contacts entry).


1. Highlight  and press  > *Settings/Tools* > *Settings* > *Display* > *Dialing Font Size*.
2. Highlight *Large* or *Small* and press .

Changing the Phone's Menu Orientation

Although the menu displays as a series of onscreen icons, the arrangement of these icons is dependent on the current viewing mode: portrait or landscape.

- ▶ If the keypad is the currently active input source, the menu displays in portrait mode.
 - or –
- 1. To display the menu in landscape mode, rotate the phone 90 degrees counter-clockwise.

2. Slide the top section of the phone up to open. When you slide the phone open, the display rotates from a vertical viewing mode to a horizontal viewing mode.

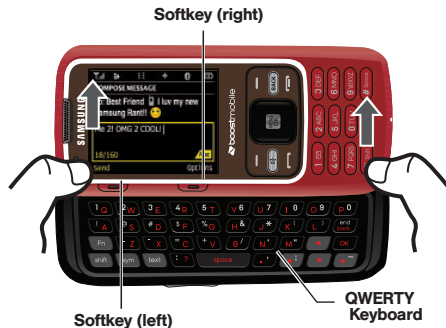

Location Settings

Your phone is equipped with a Location feature for use in connection with location-based services.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note

Turning Location on will allow the network to detect your position using GPS technology, making some Boost applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable your phone's Location feature:

1. Highlight  and press  > **Settings/Tools** > **Settings** > **More...** > **Location**. (The Location disclaimer displays.)
2. Read the disclaimer and press **OK** (left softkey).
3. Highlight **On** or **Off** and press .

When the Location feature is on, your phone's standby screen displays the  icon. When Location is turned off, the  icon displays.

Messaging Settings

Staying connected to your friends and family has never been easier. With your phone's advanced messaging capabilities, you can send and receive many different kinds of text messages without placing a voice call. (For more information, see "Accessing Messaging" on page 142.)

Messaging settings make text messaging easier by letting you decide how you would like to be notified of new messages, create a signature with each sent message, and create your own preset messages.

Setting Message Notification

When you receive a message, your phone notifies you by displaying an icon on your display screen. You can also choose to be notified with a message notification on your display screen.

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Messages* > *Notification*.
2. Highlight *Message & Icon* or *Icon only* and press .

Tip

To access the Messaging Settings menu, you can also press *Menu* > *Messaging* > *Settings* > *General*.

Adding a Customized Signature

Add a customized signature to each message you send.

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Messages* > *Signature*.
2. Read the onscreen message, highlight *On* and press . (If you do not wish to attach a signature to your outgoing messages, select *Off*.)

Setting Message Reminders

When new messages arrive, you can choose to ignore them and set the phone to periodically remind you of them by playing an audible alert at a set interval.

To hear a reminder alert for unread messages:

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Messages* > *Message Reminder*.

2. Highlight *Off*, *Once*, or *Every 2 min* and press .

Deleting Old Messages

Delete messages you have read whenever you like, or have your phone delete automatically for you.

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Messages* > *Auto-Delete*.
2. Select *Yes* or *No* and press .

Managing Pre-set Messages

Your phone is loaded with 17 pre-set messages to help make sending text messages easier. Customize or delete these messages, such as “Where are you?”, “Give me a call”, and “Meet me at” to suit your needs, or add your own messages to the list.

To edit a pre-set message:

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Messages* > *Pre-set Message*. (The list of pre-set messages displays.)
2. Highlight the message and press *Edit* (left softkey) to edit the message (see “Entering Text in Portrait

Mode” on page 28 or “Entering Text in Landscape Mode” on page 31), and press .

To delete pre-set message(s):

1. Highlight  and press  > **Settings/Tools** > **Settings** > **Messages** > **Pre-set Message**. (The list of pre-set messages displays.)
2. Highlight a message and press **Options** (right softkey) > **Delete** to delete the message, or press **Options** (right softkey) > **Delete All** to delete all messages, and press .

To add a new pre-set message:

1. Highlight  and press  > **Settings/Tools** > **Settings** > **Messages** > **Pre-set Message**. (The list of pre-set messages displays.)
2. Press **Options** (right softkey) > **Add New**.
3. Enter a new message and press **Done** (right softkey) (See “Entering Text in Portrait Mode” on page 34 or “Entering Text in Landscape Mode” on page 39). The new message appears in the list.

Note

Since only 17 slots are available, when a new custom pre-set message is added, the last message in the list is dropped to make room for the new message.

Other Text Message Settings

These settings allow you to configure the options associated with a text message sent from your phone. These options include:

- **Save in Outbox** - allows you to save a copy of a sent message in your outbox.
- **Priority** - allows you to set a priority level of Normal or Urgent for text messages.
- **Callback Number** - allows you to set the callback number for the recipient to view when receiving a text message.
- **Draft Alert** - allows you to set an alert when your message has been stored as a draft.

To save new messages in the outbox:

1. Highlight  and press  > **Settings/Tools** > **Settings** > **Messages** > **Save in Outbox**.
2. Highlight **Yes** or **No** and press .

To set the priority level:

1. Highlight  and press  > **Settings/Tools** > **Settings** > **Messages** > **Priority**.
2. Highlight **Normal** or **Urgent** and press .

To activate a callback number:

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Messages* > *Callback Number*.
2. Highlight *None*, *<current number>*, or *Other* and press .

To set the draft alert:

1. Highlight  and press  > *Settings/Tools* > *Settings* > *Messages* > *Draft Alert*.
2. Highlight *On* or *Off* and press .

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games, Notepad, and Voice Memos, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When you set your phone to Airplane Mode, it cannot send or receive any calls or access online information.

1. Highlight  and press  > *Settings/Tools* > *Settings* > *More...* > *Airplane Mode*.
2. Read the disclaimer and press .

3. Highlight *On*, *Off*, or *On PowerUp* and press .

While in Airplane Mode, your phone's standby screen will display "Phone off."

TTY Use

A TTY (teletypewriter, also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the cable.

To access the state Telecommunications Relay Service (TRS) for assistance with TTY calls:

- ▶ Dial    . Then provide the state TRS with this number: 888-308-4988.

For additional technical support you may call 1-888-987-4357, or access the following website:
http://www.samsung.com/us/consumer/learningresources/mobile/accessibility/pop_accessibility.html.

WARNING

911 Emergency Calling

Boost recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

To turn TTY Mode on or off:

1. Highlight  and press  > **Settings/Tools** > **Settings** > **More...** > **Accessibility** > **TTY Options**. (An informational message displays.)
2. Read the informational message and press .

3. Highlight **TTY Full**, **TTY + Hear**, **TTY+ Talk**, or **TTY Off** and press .

Note

In TTY Mode, your phone will display the TTY access icon.

When enabled, TTY mode may impair the audio quality of non-TTY devices connected to the headset jack.

Phone Setup Options

Favorite Shortcuts

Your phone offers you the option of assigning shortcuts to favorite or often-used functions. Pressing the navigation key to the assigned direction in standby mode will launch your personally designated shortcuts.

1. Select  to access the Favorites menu.
2. Using the navigation key, select a current shortcut and press .
3. Press  to return to standby mode.

To create a new favorite shortcut:

1. Select  > **Add Favorite** and press .
2. Highlight from one of the following categories and press : *My Stuff*, *My Album*, *Bookmark*, or *Menu Item*.
3. Make a selection and press **Assign** (left softkey) to make the new shortcut assignment.

Call Answer Mode

Select how to answer incoming calls on your phone: whether you want to be required to press  or to press any number key.

1. Highlight  and press  > **Settings/Tools** > **Settings** > **More...** > **Call Setup** > **Call Answer**.
2. Highlight an option and press .
 - **Any Key** to allow an incoming call to be answered by pressing any key except , **Ignore** (right softkey), **Silence** (left softkey), or .
 - **Talk Key** to require  to be pressed to answer all incoming calls.

Auto Answer Mode

Set your phone to automatically pick up incoming calls when connected to an optional hands-free car kit.

1. Highlight  and press  > **Settings/Tools** > **Settings** > **More...** > **Call Setup** > **Auto Answer**.
2. Highlight a **Car-Kit/Headset** option and press .
 - **Yes** to answer calls automatically when the phone is connected to a hands-free car kit or a headset (sold separately). Remember, your phone will answer calls in Auto-Answer mode even if you are not present.
 - **No** to disable Auto-Answer.

Setting Abbreviated Dialing

To activate the **Contacts Match** feature:

This feature allows the phone to try and match the numbers being entered to an existing Contacts entry. This saves time by not having to enter the full phone number to find a match.

1. Highlight  and press  > **Settings/Tools** > **Settings** > **More...** > **Call Setup** > **Contacts Match**.

2. Highlight *On* or *Off* and press .

To activate the Abbreviated Dialing feature:

When activated, this feature allows you to prepend five to six digits onto digits you enter.

1. Highlight  and press  > *Settings/Tools* > *Settings* > *More...* > *Call Setup* > *Abbreviated Dial*.
 2. Highlight *On* and press .
 3. Enter the five- or six-digit prefix in the *Abbrev. Dial* field and then press .
- To deactivate this feature, select *Off* during step 2.

Tip To make an Abbreviated Dial call, see “Using Abbreviated Dialing” on page 33.

Note This setting does not apply to 911 or 411.

Security Settings

Accessing the Security Menu

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

1. Highlight  and press  > *Settings/Tools* > *Settings* > *More...* > *Security*.
2. Enter your lock code to display the Security menu.

Tip If you can't recall your lock code, try using the last four digits of your wireless phone number. If this doesn't work, call Boost Customer Care at 1-888-BOOST-4U (1-888-266-7848).

Important The first time you access the Lock Phone menu, you will be advised to change the default lock code by pressing **Change Lock Code**. Enter and re-enter your new lock code to proceed.

Using Your Phone's Lock Feature

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911 or special numbers. (See “Special Numbers” on page 67.)

1. Highlight  and press  > *Settings/Tools* > *Settings* > *More...* > *Restrict and Lock* > *Lock my Phone*.
2. Enter your new code and press .
3. Highlight a lock option (*On Power-Up* or *Lock Now*) and press . (To set your phone to lock the next time it is turned on, select *On Power-Up*.)

Unlocking Your Phone

1. Press  to display the User Lock screen.
2. Press *UNLOCK* (left softkey) and enter your lock code.

Changing the Lock Code

1. Highlight  and press  > *Settings/Tools* > *Settings* > *More...* > *Security* and enter your lock code.

2. Select *Change Lock Code*.
3. Enter your new code and press *Next* (left softkey).
4. Re-enter your new lock code and press *Done* (left softkey).

Calling in Lock Mode

You can place calls to 911 and to your special number when in lock mode. (For information on special numbers, see “Special Numbers” on page 67.)

- ▶ To call an emergency number or one of your special numbers enter the phone number and press .

Lock Services

This setting allows you to lock voice call functions and data services. When you enable Lock Services, you will be unable to make new calls (excluding emergency numbers) or to access the data services until the lock has been disabled in the Security menu.

Locking Voice Services

1. Highlight  and press  > *Settings/Tools* > *Settings* > *More...* > *Restrict and Lock*.
2. Highlight *Voice* and press .
3. Enter your user lock code.
4. Highlight *Lock* and press . Highlight *Lock*, then press .

Restricting Outgoing Voice Calls

1. Highlight  and press  > *Settings/Tools* > *Settings* > *More...* > *Restrict and Lock*.
2. Highlight *Voice* and press .
3. Enter your user lock code.
4. Highlight *Restrict* and press .

5. Highlight *Outgoing Call* and press .
6. Highlight *Allow all*, *Contacts Only*, or *Special # Only* and press .

Restricting Incoming Voice Calls

1. Highlight  and press  > *Settings/Tools* > *Settings* > *More...* > *Restrict and Lock*.
2. Highlight *Voice* and press .
3. Enter your user lock code.
4. Highlight *Restrict* and press .
5. Highlight *Incoming Call* and press .
6. Highlight *Allow all*, *Contacts Only*, or *Special # Only* and press .

Locking and Unlocking Your Contacts

Locking your Contacts list prevents any alterations in its contents. No entry can be deleted or altered without first disabling this feature.

1. Highlight  and press  > *Settings/Tools* > *Settings* > *More...* > *Restrict and Lock*.
2. Highlight *Voice* and press .

3. Enter your user lock code.
4. Highlight **Restrict** and press .
5. Highlight **Lock Contacts** and press .
6. Highlight an option and press .
 - **On** to lock your phone book
 - **Off** to unlock your phone book.

Special Numbers

Special numbers are important numbers that you have designated as being “always available.” You can call and receive calls from special numbers even if your phone is locked.

You can save up to 3 special numbers in addition to your Contacts entries (the same number may be in both directories).

To add or replace a special number:

1. Highlight  and press  > **Settings/Tools** > **Settings** > **More...** > **Security** and enter your lock code.
2. Select **Special #**.

3. Highlight a location (1 - 3) for your entry and press .
4. Enter the number and press .

Note

There are no speed dial options associated with special numbers.

Erasing Phone Content

Use the Security menu to quickly erase all the content you have created or stored in your phone.

1. Highlight  and press  > **Settings/Tools** > **Settings** > **More...** > **Security** and enter your lock code.
2. Select **Erase/Reset**.
3. Highlight an option and press .
 - **Erase Web Cookies** to erase all web tracking cookies.
 - **Erase Web History** to erase the history of your recently-visited web sites.
 - **Erase Web Cache** to erase any temporarily-downloaded web files.

- **Erase Contacts** to erase the contents of your Contacts list.
 - **Erase My Stuff** to erase all the content you have downloaded to your phone.
 - **Erase Pic/Video** to erase all stored pictures and videos.
 - **Erase Messages** to erase all stored messages.
 - **Reset Picture Account** to reset any previously-configured picture account settings.
 - **Reset Shortcuts** to reset the list of previously-created shortcuts from the carousel.
 - **Default Settings** to reset the phone to its default settings, but keep any current data on the phone.
4. Select **Yes** to confirm the deletion.

Resetting your Picture Account

Resetting your picture account settings clears the account settings and you will need to register your picture account again before you can use it.

1. Highlight  and press  > **Settings/Tools** > **Settings** > **More...** > **Security** and enter your lock code.

2. Select **Erase/Reset** > **Reset Picture Account**.
3. Read the disclaimer, select **Yes**, and press .

Resetting your Phone Settings

Resetting the default settings restores all the default settings to your phone, without deleting any data you have entered, such as entries to your Contacts list. Contacts and Messaging are not affected.

1. Highlight  and press  > **Settings/Tools** > **Settings** > **More...** > **Security** and enter your lock code.
2. Select **Erase/Reset** > **Default Settings**.
3. Read the disclaimer, select **Yes**, and press .
4. Select **Yes** to confirm.

Resetting Your Phone

Resetting the phone restores all the factory settings, including the ringtone types and display settings.

WARNING	<i>Resetting your phone deletes all files that you have previously downloaded.</i>
----------------	--

1. Highlight  and press  > *Settings/Tools* > *Settings* > *More...* > *Security* and enter your lock code.
2. Select *Erase/Reset* > *Reset Phone*.
3. Read the disclaimer, press *OK* (left softkey), select *Yes*, and press .
4. You will be asked to confirm resetting the phone. If you are sure you want all data erased and the phone reset to its factory default state, select *Yes*, and press .

Security Features for Data Services

Enabling and Disabling Data Services

You can disable data services without turning off your phone; however, you will not have access to all data services, including Web and Media Mail.

Disabling data services will avoid any charges associated with these services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may enable data services again at any time.

To disable data services:

1. Highlight  and press  > *Settings/Tools* > *Settings* > *More...* > *Data* > *On/Off*. (A message displays.)
2. Read the onscreen message and select *Next* (left softkey) > *Disable Data Services* to confirm that you want to sign out and deactivate data.

To enable data services:

1. Highlight  and press  > *Settings/Tools* > *Settings* > *More...* > *Data* > *On/Off*. (A message displays.)
2. Highlight *Yes* and press  to enable data service and connect to the network.

History

- ♦ *Viewing History (page 70)*
- ♦ *History Options (page 71)*
- ♦ *Making a Call From History (page 71)*
- ♦ *Saving a Phone Number From History (page 72)*
- ♦ *Erasing History (page 72)*

Viewing History

History is a list of the last 60 phone numbers (or Contacts entries) for calls you placed, accepted, or missed. History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the phone number is in your Contacts). Duplicate calls (same number and type of call) may only appear once on the list.

1. Highlight  and press  > *History*.
2. Highlight an entry and press .

Note

History records only calls that occur while the phone is turned on. If a call is received while your phone is turned off, the number is not included in the phone's history.

Calls returned from the voicemail menu are not included in your phone's history.

History Options

Select a History entry from the Recent History screen and press  to display the date and time of the call, the phone number (if available), and the caller's name (if the number is already in your Contacts).

Press **Options** (right softkey) from the Recent History screen to display the following options:

- **New Group** to save the current history entry to a new group.
- **Save** to save the number if it is not already in your Contacts. (See “Saving a Phone Number From History” on page 72.)
- **Contact Details** to view the contact entry's information, if the number is saved to your Contacts.
- **Delete** to delete the entry.
- **Delete All** to delete all History entries.

Tip

You can also view the next History entry by pressing the navigation key down or view the previous entry by pressing the navigation key up.

Select an entry and press  to view call details (the number or Contacts-specific history) where you can

press **Options** (right softkey) to display the following options:

- **Delete** to delete the entry.
- **Delete All** to delete all History entries.
- **Prepend** to prepend a series of digits to the current entry.
- **Save Contact** to save the number if it is not already in your Contacts. (See “Saving a Phone Number From History” on page 72.)
- **Contact Details** to view the contact entry's information, if the number is saved to your Contacts.

Making a Call From History

1. Highlight  and press  > **History**.

2. Select an entry and press .

– or –

Press  from the main screen to also bring up the Recent History screen and select an entry.

Note

You cannot make calls from History to entries identified as **Blocked ID**, **Unknown** or **Restricted**.

Saving a Phone Number From History

Your phone can store up to 600 Contacts entries. Contacts entries can store up to a total of seven phone numbers.

1. Select a History entry and press **Options** (right softkey) > **Save**.
2. Select **New Entry** to create a new Contacts entry for the number.
 - or –
 - Select **Existing Entry** and save the number to an existing entry.
3. Select a label (such as **Mobile**, **Home**, **Work**, **Pager**, **Fax**, or **Others**) and press .
4. Use either the keypad or keyboard to type in the new entry name and press 
 - or –
 - Select an existing Contact entry and press .

5. Make any other selection or entries for this new Contact.
6. Press **Done** (left softkey) to save the new entry to your Contacts list and exit.

After you save the number, the new Contacts entry displays. (See “Editing a Contacts Entry” on page 78.)

Note

You cannot save phone numbers already in your Contacts or from calls identified as **Blocked ID**, **Unknown**, or **Restricted**.

Erasing History

To erase individual History entries, see “History Options” on page 71.

To erase a specific History entry:

1. Highlight  and press  > **History**.
2. Highlight an entry and press **Options** (right softkey) > **Delete**.

3. If you are certain you want to erase the entry, select **Delete** (left softkey).
 - or –
 - Select **Cancel** (right softkey) to return to the previous menu.

To erase all History entries:

1. Highlight  and press  > *History*.
2. Highlight an entry and press **Options** (right softkey) > **Delete All**.
3. If you are certain you want to erase all history entries, select **Delete** (left softkey).
 - or –
 - Select **Cancel** (right softkey) to return to the previous menu.

Contacts

- ♦ Adding a New Contacts Entry (page 74)
- ♦ Saving a Number from Standby (page 75)
- ♦ Adding a Phone Number to a Contacts Entry (page 76)
- ♦ Editing a Contacts Entry's Phone Number (page 76)
- ♦ Deleting a Contact (page 76)
- ♦ Assigning Speed Dial Numbers (page 76)
- ♦ Editing a Contacts Entry (page 78)
- ♦ Adding a New Group (page 78)
- ♦ Assigning a Picture to an Entry (page 79)
- ♦ Selecting a Ringtone for an Entry (page 79)
- ♦ Secret Contacts Entries (page 80)
- ♦ Dialing Services (page 81)

Tip

For quick access to favorite contacts, add them to your main screen carousel. See "Navigating the Main Screen" on page 44 for details.

Adding a New Contacts Entry

Your phone can store up to 600 Contacts entries. Contacts entries can store up to a total of seven phone numbers.

1. Highlight  and press  > *Contacts* > *Add New*.

Note

Press **Contacts** (right softkey) from the standby screen to access the Contacts page.

2. Select **New Contact** to create a new Contacts entry.
3. Enter a name for the new entry and press the navigation key down. (See "Entering Text in Portrait Mode" on page 34 or "Entering Text in Landscape Mode" on page 39.)
4. Enter the phone number for the entry and press .
5. Highlight a label for the entry (*Mobile*, *Home*, *Work*, *Pager*, *Fax*, or *Others*) and press .
6. Alter any of the following fields.
 - <Contact Image> to edit the image associated with the contact entry.

- <**Contact Name**> to edit the contact entry name.
- <**Current number**> to edit the entry phone number. (See “Editing a Contacts Entry’s Phone Number” on page 76.)
- <**Add Number**> to add a phone number to the entry. (See “Adding a Phone Number to a Contacts Entry” on page 76.)
- <**E-mail**> to add an email address to the entry.
- <**IM**> to add an Instant Messenger address to the entry.
- <**URL**> to add a Web site’s URL to the entry.
- <**Memo**> to add a note, street address, or other information.
- <**Ringtone**> to assign a preprogrammed or downloaded ringtone.

Tip You can view the next entry by pressing the navigation key down or view the previous entry by pressing the navigation key up.

7. Press **Done** (left softkey).

After you save the number, the new Contacts entry displays.

For additional Contacts Entry Options and Details, refer to the online User Guide.

Tip

ICE – In Case of Emergency

To make it easier for emergency personnel to identify important contacts, you can list your local emergency contacts under “ICE” in your phone’s Contacts list. For example, if your mother is your primary emergency contact, list her as “ICE–Mom” in your Contacts list. To list more than one emergency contact, use “ICE1–___,” “ICE2–___,” etc.

Saving a Number from Standby

1. From the standby screen, enter a phone number and press **Options** (right softkey) > **Save**.
2. Highlight **New Entry** or **Existing Entry** and press .
3. Highlight a label for the entry (**Mobile**, **Home**, **Work**, **Pager**, **Fax** or **Others**) and press .
4. Press **Done** (left softkey) to save the new number.

Adding a Phone Number to a Contacts Entry

1. Highlight a Contacts entry.
2. Select **Options** (right softkey) > **Edit Contact** > **<Add Number>**.
3. Enter the new phone number and press .
4. Highlight a label for the entry (*Mobile, Home, Work, Pager, Fax* or *Others*) and press .
5. Press **Done** (left softkey) to save the new number.

Editing a Contacts Entry's Phone Number

1. Highlight a Contacts entry.
2. Select **Options** (right softkey) > **Edit Contact** and select an existing number.
3. Press  to clear one digit at a time, or press and hold  to erase the entire number.

4. Re-enter or edit any number and press **Done** (left softkey) to save the information.

Deleting a Contact

1. Highlight a Contacts entry.
2. Select **Options** (right softkey) > **Delete Contact**.
3. Select **Delete** (left softkey) to confirm the deletion.

Assigning Speed Dial Numbers

Your phone can store up to 98 phone numbers in speed dial locations. (For details on how to make calls using speed dial numbers, see “Using Speed Dialing” on page 34.)

You can assign speed dial numbers when you add a new Contacts entry, when you add a new phone number to an existing entry, or when you edit an existing number.

To assign a speed dial number to a new phone number:

1. Add a phone number to a new or an existing Contacts entry. (See “Adding a New Contacts Entry” on page 74 or “Adding a Phone Number to a Contacts Entry” on page 76.)
2. Highlight the recently added number from the Contacts Details page and press **Options** (right softkey) > **Set Speed Dial**.
3. Select an available (unassigned) speed dial location and press **Assign** (left softkey). (A confirmation displays.)
4. Press  to complete the assignment.

To assign a speed dial number to an existing phone number:

1. Highlight a Contacts entry.
2. Use the navigation key to scroll to the entry's desired number and press **Options** (right softkey) > **Settings** > **Speed Numbers**.

3. Select an available speed dial location (or enter a location using your keypad) and press **Assign** (left softkey) or press . (The new speed dial entry is then assigned.)
4. Press  to return to the Contacts menu.

Note

*If you attempt to assign an already in-use speed dial location to a new phone number, a message will appear asking if you wish to replace the existing speed dial assignment. Press **Replace** to assign the location to the new phone number and delete the previous speed dial assignment.*

Finding Speed Dial Numbers

1. Highlight  and press  > **Contacts**.
– or –
Press **Contacts** (right softkey) from the standby screen.
2. Highlight a Contacts entry and press **Options** (right softkey) > **Settings** > **Speed Numbers**.

3. Scroll through speed dial entries. Speed dial numbers display in numeric order.

– or –

Enter the number of a speed dial location using your keypad.

Note Speed Dial location 1 is reserved for voicemail access.

4. To display the details of an entry, highlight it and press .
5. To dial the entry's default phone number, press .

Editing a Contacts Entry

1. Highlight a Contacts entry.
2. Press **Options** (right softkey) > **Edit Contact** to display the Edit Entry menu.
3. Highlight the information field you wish to edit (*Name*, *Ringtone*, etc.) and press .
4. Add or edit the information and press .

5. Press **Done** (left softkey) to save your changes.

Adding a New Group

Groups allow you to communicate simultaneously by sending out a broadcast text message to every member of a current group.

1. Highlight  and press  > **Contacts** > **Add New**.
– or –

From the main screen, press **Contacts** (right softkey) > **Add New** to access the Contacts page.

2. Select **New Group** to create a grouping of contacts.
3. Read the onscreen information and press **Start** (left softkey).
4. Add multiple entries (two or more) to your new group by highlighting a name from the list and pressing . This action places a check mark alongside each name to add.
5. Press **Continue** (left softkey) and enter a name for the new group entry. (See “Entering Text in Portrait

Mode” on page 34 or “Entering Text in Landscape Mode” on page 39.)

6. Press **Save** (left softkey) to assign the selected entries to the new group.

Assigning a Picture to an Entry

Assign a picture to display each time a certain contact calls you.

1. Display a Contacts entry’s details page information and press **Options** (right softkey) > **Edit Contact**.
2. Highlight the current image or picture type and press **Add** (right softkey) to display the Photo ID menu.
3. Select an option, such as **None**, **New Picture**, **My Albums**, or **Wallpapers**.
4. Highlight a picture and press  twice to assign it.
 - If you selected **New Picture**, the camera will launch and you will use it to take a new picture. (See “Camera” on page 106 for details.)

- If you selected **My Albums**, you may need to select **In Phone**, **Memory Card**, or **Online Albums** to find the picture.

5. Press **Assign** (left softkey) to save the assigned picture.
6. Press **Done** (left softkey) to complete the process.

Selecting a Ringtone for an Entry

Assign a ringtone type to a Contacts entry so you can identify the caller by the ringtone type. (See “Ringtone Types” on page 52.)

1. Highlight a Contacts entry.
2. Press **Options** (right softkey) > **Edit Contact** to display the Edit Entry menu.
3. Highlight the current ringtone type and press  to display the **Select Ringtone** menu.
4. Select a category: **Default Ringtone**, **Download Ringtones**, **Other Ringtones**, **My Videos** or **No Ringtone**.

5. Scroll through available ringtones. (When you highlight a ringtone type, a sample ringtone will sound.)
6. Highlight a ringtone and press .
7. Press **Done** (left softkey) to save the new ringtone.

Tip To download a new ringtone, select **Menu > My Stuff > Ringtones > Get New Ringtones** and follow the instructions to select, purchase, download, and assign the new ringtone.

Secret Contacts Entries

Making an entry secret hides its phone number(s). The name is still displayed, but the phone numbers and other information are replaced with “(SECRET).”

Adjusting your secret settings:

1. Highlight  and press  > **Settings/Tools > Settings > Contacts > Hide Secret**.
2. Enter your user lock code. The entry now reads Show if all Hidden entries are hid once Set as Secret.

Note

To make Secret entries visible, adjust the device's secret settings to 'Show Secret' in **Settings/Tools > Settings > Contacts > Show Secret**.

To make an entry secret:

1. Highlight  and press  > **Contacts**.
2. Highlight a Contacts entry and press **Options** (right softkey) > **Set as Secret**.
3. Press  to mark the entry as secret.

To make an entry public:

1. Highlight  and press  > **Contacts**.
2. Highlight a Contacts entry and press **Options** (right softkey) > **Set as NOT Secret**.

Dialing Services

Your Contacts list is preprogrammed with contact numbers for various services.

To dial a service from your Contacts:

1. Highlight  and press  > **Contacts**.
2. Highlight **Add New** and press **Options** (right softkey) > **Settings** > **Services** and select an available service, such as **Call Balance**, **Call Care**, **Call Re-Boost**, **Directory Assistance**, or **Voicemail**.

To dial a service from standby mode using your keypad:

1. Dial the appropriate service number:
 - **Call Balance** –    
 - **Call Care** –    
 - **Call Reboost** –    
 - **Directory Assistance (411)** –   
 - **Voicemail** – 
2. Press  to place the call.

Calendar and Tools

- ◆ *Using Your Phone's Calendar (page 82)*
- ◆ *Task List (page 85)*
- ◆ *Countdown (page 86)*
- ◆ *File Manager (page 86)*
- ◆ *Alarm Clock (page 87)*
- ◆ *Memo Pad (page 88)*
- ◆ *Calculator (page 89)*
- ◆ *Tip Calculator (page 90)*
- ◆ *World Time (page 90)*
- ◆ *Updating Phone Software (page 90)*
- ◆ *Updating the PRL (page 90)*

Using Your Phone's Calendar

Adding an Event to the Calendar

Your Calendar helps you organize your time and reminds you of important events.

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Calendar* > *Scheduler*.
2. Highlight the day to which you would like to add an event and press *Options* (right softkey) > *Add New*.

Tip

Press the navigation key up or down to scroll by week through the Scheduler.

3. Enter the event title and press *Next* (left softkey). (See “Entering Text in Portrait Mode” on page 34 or “Entering Text in Landscape Mode” on page 39.)
4. Select a category for the event by highlighting the category field:
 - Select *Appointment*, *Personal*, *Business*, *Birthday*, or *Vacation*.

5. Select an alarm time for the event by highlighting the alarm field:
 - Select *No Alarm*, *On Time*, *10min before*, *30min before*, or *1 Hr before*.
6. Select a recurrence cycle for the event:
 - Select *Once*, *Daily*, *Weekly*, *Monthly*, or *Yearly*.
7. Highlight the ringtone field and press 
 - Select a ringtone category and then a ringtone and press .
8. Select a Start time and date and End time and date for the event by highlighting the fields:
 - Using your keypad or keyboard, enter the dates and times.
 - On the Time fields, change AM/PM by pressing *AM/PM* (right softkey).
9. Select a single optional contact for the event by highlighting *go to Contacts* and pressing 
 - Select a contact from the list and press  to check the box. Press *Done* (left softkey).
10. Press *Done* (left softkey) to save the event.

Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary. There are several ways your phone alerts you to scheduled events:

- By playing the assigned ringtone type.
- By illuminating the backlight.
- By flashing the LED on the front of the outer LCD.

To silence the alarm and reset the schedule, press .

To view an additional option, press the appropriate softkey:

- *Snooze* (left softkey) silences the alarm and schedules it to replay again in 9 minutes.
- *Dismiss* (right softkey) ignores the event.

Viewing Events

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Calendar* > *Scheduler*.

2. Select the day for which you would like to view events and press . (If you have events scheduled for the selected day, they will be listed in chronological order.)

Tip *In the scheduler view, days with events scheduled are outlined in red.*

3. To display an event's details, highlight it and press .

Going to the Current Day's Calendar Menu

- Highlight  and press  > *Settings/Tools* > *Tools* > *Calendar* > *Today*.

Editing an Event

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Calendar* > *Scheduler*.
2. Highlight the day containing the previously created event and press . (Days containing an event are indicated within a blue box.)
3. Highlight the event from the *Schedule* tab listing and press .

4. Press *Edit* (left softkey). Follow the onscreen procedures to alter any of the previously configured fields. See "Adding an Event to the Calendar" on page 82.

Erasing a Day's Events

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Calendar* > *Scheduler*.
2. Highlight the day for which you would like to erase and press .

Tip *In the scheduler view, days with events scheduled are outlined in red.*

3. Press *Options* (right softkey) > *Delete All*. (An alert displays notifying you that you are about to erase all events.)
4. Highlight *Yes* or *No* and press .

Erasing a Single Event

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Calendar* > *Scheduler*.
2. Select the day for which you would like to erase the single event and press .

Tip

In the scheduler view, days with events scheduled are outlined in red.

3. Highlight the event from the **Schedule** tab list and press **Options** (right softkey) > **Delete**.
4. Highlight **Yes** or **No** and press .

Task List

This option allows you to manage daily tasks that include dates, times, and priority levels.

1. Highlight  and press  > **Settings/Tools** > **Tools** > **Calendar** > **Task List**.

Note

If there are no tasks saved, the New Task screen automatically displays.

2. Press **Options** (right softkey) > **Add New**.
3. Enter the task name using either the keypad or keyboard and press **Next** (left softkey).
4. Select a priority level by highlighting the **Priority** field.

- Press the navigation key left or right to select **Low** or **High**.
5. Select a due time by highlighting the **Due Time** field.
 - Using your keypad and/or navigation key, set the alarm time.
 - Change the AM/PM entry by pressing **AM/PM** (right softkey).
 6. Select a due date by highlighting the **Due Date** field.
 - Using your keypad and/or navigation key, set the date.
 7. Press **Done** (left softkey) to save and exit.

Countdown

This option allows you to enter a timer that counts down to an event based on a date and time specified.

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Calendar* > *Countdown*.

Note

If there are no countdowns saved, the New Countdown screen automatically displays.

2. Press *Add New* (left softkey).
3. Enter the countdown name using either the keypad or keyboard.
4. Select a time by highlighting the *Time* field.
 - Using your keypad and/or navigation key, enter the time of the countdown.
 - Change the AM/PM entry by pressing *AM/PM* (right softkey).
5. Select a date by highlighting the *Date* field.
 - Using the keypad, enter the date of the countdown.
6. Press *Done* (left softkey) to save and exit.

File Manager

File Manager allows you to manage files such as pictures, videos, music, and applications stored in your phone or on the microSD card. (See “Connecting Your Phone to Your Computer” on page 102.)

Accessing File Manager

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Mass Storage* > *File Manager*.
2. Highlight an option and press .
 - *Phone* to access files stored in your phone's memory.
 - *Memory Card* to access files stored on the microSD card.

Opening Files in File Manager

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Mass Storage* > *File Manager* > *Phone* or *Memory Card*.

2. Highlight a folder and press .
3. Highlight an item and press .

File Manager Options

When viewing files or folders in File Manager, highlight a file and press **Options** (right softkey) to display available options. Highlight an option and press to select it.

- **Send** to send the currently selected file via either Email or Bluetooth.
- **Delete** to delete a file or folder from File Manager.
- **Rename** to change the name of a selected file.
- **Create Folder** to create a new subfolder within the current location. (See “Creating Folders in the microSD Card” on page 102.)
- **Sort** to sort folder contents by Name, Date, or Type.
- **Copy** to copy a file from the current folder to another folder location such as Phone (or Memory Card), Card Album, File Storage, or Media.
- **Move** to move a file from the current folder to another folder location such as Phone (or Memory Card), Card Album, File Storage, or Media.

- **Find** to search for a file within the current folder location.

Alarm Clock

Your phone comes with a built-in alarm clock that has multiple alarm capabilities.

1. Highlight  and press  > **Settings/Tools** > **Tools** > **Alarm**.
2. Select **Alarm #1**, **Alarm #2**, or **Alarm #3** and press .
3. Turn the alarm **On** or **Off** by highlighting the Alarm activation field and pressing the navigation key left or right.
4. Select a time for the alarm by selecting the **Time** field.
 - Using your keyboard and/or navigation key, set the alarm time.
 - Change the AM/PM entry by pressing **AM/PM** (right softkey).

5. Select a ringtone type for the alarm by selecting the ringtone field and pressing 
 - Highlight an available ringtone category and press .
 - Choose from either: *Ringtones*, *Melodies*, or *My Stuff*.
6. Select a repeating status for the alarm by highlighting the *Repeat* field and pressing your navigation key left or right.
 - Choose from either: *Once*, *Daily*, *Mon to Fri*, or *Sat & Sun*.
7. Select a snooze interval for the alarm by highlighting the *Snooze Interval* field and pressing your navigation key left or right.
 - Choose from: *Off*, *5 minutes*, *10 minutes*, *15 minutes*, or *20 minutes*.
8. Press *Done* (left softkey) to save and exit.

Memo Pad

Your phone comes with a notepad that you can use to compose and store reminders and notes to help keep you organized.

To compose a note:

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Memo Pad*.

Note

If there are no memos saved, (None) appears on the screen.

2. Press *Add New* (left softkey).
3. Type your note using either the keypad or keyboard and press  or *Done* (left softkey). (See “Entering Text in Portrait Mode” on page 34 or “Entering Text in Landscape Mode” on page 39.)

To read a saved note:

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Memo Pad*.
2. Highlight a note and press .

To edit a note:

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Memo Pad*.
2. Highlight a note and press .
3. Press *Edit* (left softkey).
4. Press  or  to erase a single character. To erase an entire word, press and hold  or .
5. Type your note using either the keypad or keyboard and press  or *Done* (left softkey). (See “Entering Text in Portrait Mode” on page 34 or “Entering Text in Landscape Mode” on page 39.)

To delete all saved notes:

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Memo Pad*.
2. Highlight a note and press *Options* (right softkey) > *Delete All*. (An alert displays notifying you that you are about to erase all memos.)
3. Highlight *Yes* or *No* and press .

To delete an individual saved note:

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Memo Pad*.
2. Select a note and press *Options* (right softkey) > *Delete*.
3. Highlight *Yes* or *No* and press .

Calculator

Your phone comes with a built-in calculator.

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Calculator*.
2. Enter numbers using your keypad.
 - Press  to enter decimal points.
 - Press  to change the sign from positive to negative.
 - Press *Clear* (right softkey) to clear all numbers.
3. Press  for the total.

Tip Calculator

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Tip Calculator*
2. Use your keyboard and navigation key to enter the bill amount and tip percentage. (The application instantly calculates the correct tip.)
3. If you're splitting the check, highlight # Paying and enter the number of people in your party. (The application calculates and displays an equal split.)

World Time

To view the time in over 30 different locations:

1. Highlight  and press  > *Settings/Tools* > *Tools* > *World Time*.
2. Press the navigation key left or right to scroll through different cities and time zones.
3. Press **Set DST** (left softkey) to turn daylight saving time on or off.

Updating Phone Software

The update phone option allows you to download and update the software in your phone automatically. Only the internal software is updated; no Contacts entries or other information saved to your phone will be deleted.

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Update Phone* > *Update Firmware*.
2. Follow the onscreen instructions. (Your phone automatically downloads and installs any available updates. You may be required to power your phone off and back on to complete the upgrade.)

Updating the PRL

This option allows you to download and update the PRL (preferred roaming list) automatically.

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Update Phone* > *Update PRL*.
2. Follow the onscreen instructions.

Voice Services

- ◆ *Automatic Speech Recognition (ASR) (page 91)*
- ◆ *Managing Voice Memos (page 97)*

Your phone's Voice Services let you place calls using your voice and store voice reminders right on your phone. This section includes easy-to-follow instructions for using voice-activated dialing.

Note *The Voice Service feature can be used to dial previously stored phone numbers (since the application recognizes these saved names).*

Tip *If ASR does not recognize your command it will prompt you to confirm it, or display a list of possible matches.*

Automatic Speech Recognition (ASR)

You can use your phone's built-in automatic speech recognition (ASR) software to dial a phone number in your Contacts or to launch phone functions. All you have to do is to talk into the phone, and ASR will recognize your voice and complete tasks by itself.

Activating ASR

- ▶ Press and hold .

The screen displays "Say a command" and the phone prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts.

Available ASR commands include:

- **Call** <Name or #> to call an entry in your Contacts list or a spoken phone number. (See "Making a Voice Call With ASR" on page 92.)
- **Send Text** <Name or #> to launch text messaging on your phone and specify a recipient for a new

message. (See “Sending a Text Message with ASR” on page 93.)

- **Send Picture** <Name or #> to launch picture messaging on your phone and specify a recipient for a new picture mail message. (See “Sending a Media Mail Message with ASR” on page 93.)
- **Lookup** <Name> to lookup a Contacts entry name from your current list of available contacts. (See “Looking Up a Contacts Entry with ASR” on page 94.)
- **Go To** <Menu> to jump directly to menu items or applications. (See “Opening Menus with ASR” on page 94.)
- **Check** <Item> to listen to information about your phone’s status. (See “Checking Phone Status with ASR” on page 94.)

Tip

Use ASR in a quiet environment so it can accurately recognize your commands.

During ASR operation, press **Tutorial** (left softkey) to get instructions for using the software.

Tips for Using ASR

- ASR works best in quieter environments.
- When saying a name, speak at a normal speed and say the name clearly. There is no need to pause between the first name and last name.

Making a Voice Call With ASR

1. Press and hold .
2. At the prompt “**Say a command.**” say “**Call.**”
3. If the location is not recognized or the name does not have a number stored in Contacts, your phone will say “**No match found, Try Again?**” and then return you to the previous screen.
4. If you hear “**Say the name or number,**” say a name from your Contacts list, or a phone number.
5. If you hear “**Which location?**”, say the entry location, for example, Home, Work or Mobile.

Tip

You can skip steps 4 and 5 by saying a name and location after “Call” without pausing (for example, “Call John Jones mobile”).

Sending a Text Message with ASR

Use automatic speech recognition to launch text messaging on your phone and specify a recipient for the message.

1. Press and hold .
2. Say *"Send Text"*.
3. If the location is not recognized or the name does not have a number stored in Contacts, your phone will say *"No match found, Try Again?"* and then return you to the previous screen.
4. If you hear *"Say the name or number,"* say a name from your Contacts list, or a phone number.
5. If you hear *"Which location?"*, say the entry location, for example, Home, Work or Mobile.

Tip You can skip steps 4 and 5 by saying a name and location after "Send Text" without pausing (for example, "Send Text John Jones mobile").

6. Continue creating the message, then press **Send** (left softkey) to send the message. (See "Text Messaging (SMS)" on page 132.)

Sending a Media Mail Message with ASR

Use a single voice command to launch a new Media Mail message where the phone begins the address process.

1. Press and hold .
2. Say *"Send Picture"*.
3. If the location is not recognized or the name does not have a number stored in Contacts, your phone will say *"No match found, Try Again?"* and then return you to the previous screen.
4. If you hear *"Say the name or number,"* say a name from your Contacts list, or a phone number.
5. If you hear *"Which location?"*, say the entry location, for example, Home, Work or Mobile.

Tip You can skip steps 4 and 5 by saying a name and location after "Send Picture" without pausing (for example, "Send Picture John Jones mobile").

6. Continue creating the message, then press **Send** (left softkey) to send the message. (See "Sending Pictures and Video via Media Mail" on page 116.)

Looking Up a Contacts Entry with ASR

Look up and display contact information for any person stored in your Contacts list by saying “**Contacts**,” followed by the name.

1. Press and hold .
2. Say “**Lookup**”, followed by the name of a contact from your Contact list.
3. If you hear “**Say the name**”, say a name from your Contacts list.
4. The entry information for the specified contact displays.

Tip You can skip step 3 by saying a name after “**Lookup**” without pausing (for example, “**Lookup John Jones**”).

Opening Menus with ASR

You can jump directly to many menu items or applications by saying “**Go To**” followed by a shortcut.

1. Press and hold .
2. Say “**Go To**”, followed by the name of a menu or application.

3. If you hear “**Which shortcut**”, say the name of a menu or application.
4. The phone opens the selected menu or application.

Tip When you say “**Go To**”, your phone displays a list of available shortcuts. You can say a shortcut, or use the Navigation key to select one.

Checking Phone Status with ASR

You can use ASR to obtain information about your phone, including time, signal strength, network, battery and your phone number.

1. Press and hold .
2. Say “**Check**”, followed by a status item (for example, “**Check Status**” or “**Check My Phone Number**”).
3. The phone speaks the status information, and displays it on the screen.

Tip When you say “**Check**”, your phone displays a list of available status items. You can say an item, or use the Navigation key to select one.

Adapting Digit Dialing

Digit Dialing is speaker independent, which means that no training or adaptation is required. Some users with heavy accents or unusual voice characteristics may find difficulty in achieving high accuracy with speaker-independent Digit Dialing, so the Adapt Digits feature allows users to dramatically improve the digit accuracy through adaptation. Users who get acceptable digit recognition accuracy will find no additional benefit to performing the Adapt Digit adaptation.

After you adapt Digit Dial, your phone will be customized to your voice. Other people will not be able to use Digit Dial on your phone unless they reset the phone to factory defaults.

Note *ONLY adapt Digit Dial if the system is frequently misrecognizing your speech. You can always restore the system to its original factory setting.*

Adaptation involves recording several digit sequences to teach the system your voice. The adaptation process takes about three minutes.

Tips for Adapting Digit Dial

- Adapt digits in a quiet place.
- Wait for the beep before starting to speak.
- Speak clearly, but say each digit sequence naturally.
- If you make a mistake while recording a sequence of digits, or if there is an unexpected noise that spoils the recording, you can say or select “No” when the prompt asks, “Did the recording sound OK?” You will then be prompted to record the sequence again.

ASR Options

To change ASR confirmation:

1. Highlight  and press  > **Settings/Tools** > **Tools** > **Voice Service**.
2. Press **Settings** (right softkey) > **Confirmation** and select an option:
 - **Automatic** to ask for confirmation only when the system is not sure what you said.
 - **Always Confirm** to always ask for confirmation.
 - **Never Confirm** to never ask for confirmation.
3. Press  to complete the process.

To adapt the system for voice:

1. Highlight  and press  > **Settings/Tools** > **Tools** > **Voice Service**.
2. Press **Settings** (right softkey) > **Adaptation** > **Adapt Voice**.
3. Press **Start** (left softkey), wait for the beep, and then repeat the words, commands and digits using a normal tone of voice.
 - If the recording is not acceptable, the phone will prompt you to repeat the phrase.
4. When you are finished with a full session, you will reach a screen that reads "Adapting..."

Note

It is recommended that you perform the complete adaptation of Digit Dial at least once to achieve the maximum benefit of this feature. If a partial adaptation is performed, you should repeat the process from the beginning.

To reset the adaptation:

1. Highlight  and press  > **Settings/Tools** > **Tools** > **Voice Service**.

2. Press **Settings** (right softkey) > **Adaptation** > **Reset Voice** > **Yes** (left softkey).

Note

Reset Voice is available only after the phone has undergone an adaptation session.

To change the ASR mode:

1. Highlight  and press  > **Settings/Tools** > **Tools** > **Voice Service**.
2. Press **Settings** (right softkey) > **Audio Modes** and select an option:
 - **Expert Mode** to sound a beep only.
 - **Prompt Mode** to prompt for required information.

Managing Voice Memos

Use your phone's Voice Services to record brief memos to remind you of important events, phone numbers, or grocery list items.

Recording Voice Memos

To record a voice memo from the main menu:

1. Highlight  and press  > **Settings/Tools** > **Tools** > **Voice Memo** > **Record**.
2. Begin recording after the prompt.

To pause/resume the recording of your memo:

- ▶ To pause the recording, press **Pause** (left softkey).
To resume the recording, press **Resume** (left softkey).

To end the recording of your memo:

- ▶ Press  or **Finish** (right softkey).

To record a one-minute memo during a phone call:

- ▶ During a call, press **Options** (right softkey) > **Voice Memo**. (A one-minute counter  displays, indicating the recording time.)

Note Only incoming audio is recorded when Voice Memo is selected during a call.

Please make sure to secure permission prior to recording the other party's voice during a call.

To pause/resume the recording of your conversation:

- ▶ To pause the recording, press **Pause** (left softkey).
To resume the recording, press **Resume** (left softkey).

To end the recording of your conversation:

- ▶ To finish recording, press **Finish** (right softkey).

Note A total of 10 one-minute memos can be recorded and saved.

Playing Voice Memos

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Voice Memo*.
2. Highlight *Review* and press . (The phone displays a list of saved memos.)
3. Highlight the desired memo and press .
– or –
Press the number corresponding to the memo you want to review.

Note Voice Memos recorded from a direct phone conversation are shown in the list with the phone number used during the recording process.

Deleting Voice Memos

To delete an individual memo:

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Voice Memo* > *Review*.
2. Highlight the desired memo to erase and press *Options* (right softkey) > *Delete*.
3. Highlight *Yes* and press .

To delete all voice memos:

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Voice Memo* > *Review*.
2. Press *Options* (right softkey) > *Delete All*.
3. At the “*Delete all voice memos?*” prompt, highlight *Yes* and press .

Section 2H

microSD Card

- ◆ *Your Phone's microSD Card Slot (page 99)*
- ◆ *microSD Settings (page 101)*
- ◆ *microSD Folders (page 102)*
- ◆ *Connecting Your Phone to Your Computer (page 102)*

Your Phone's microSD Card Slot

Using the microSD Card

Your phone is capable of supporting a microSD (Secure Digital) memory card, allowing you to expand the phone's available memory space. By inserting a purchased microSD memory card into the available slot, you can store images, videos, music, and voice data in your phone.

Note Memory cards with over 16GB of storage capacity have not been tested on this device.

Inserting the microSD Card

1. Remove the battery cover (located on the back of the phone).
2. Press the Cover Release Latch (1) and then carefully lift the battery cover away from the phone (2).



3. Locate the microSD card slot on the side of the phone.
4. With the gold contact pins facing downward, carefully insert the microSD card into the opening and firmly push it in until you hear a click indicating the card is securely installed (3).



5. Replace the cover by lining up the tabs and then firmly pressing the cover down until it snaps into place. Check that the battery is still properly installed before turning on the phone.

Note

Be sure to use only recommended microSD cards (up to 16GB). Using non-recommended microSD cards could cause data loss and damage your phone.

Removing the microSD Card

1. Repeat steps 1 - 3 from “Inserting the microSD Card” on page 99.
2. Firmly press the card into the slot and release (it should pop partially out of the slot).
3. Remove the card from the slot.
4. Replace the cover by lining up the tabs and then firmly pressing the cover down until it snaps into place. Check that the battery is still properly installed before turning on the phone.

Note

DO NOT remove a microSD card while files are being accessed or transferred. Doing so will result in loss or damage of data.

Make sure your battery is fully charged before using the microSD card. Your data may become damaged or unusable if the battery runs out while using the microSD card.

microSD Icon Indicators

The following icons display on your phone's display screen when a microSD card is properly inserted into the microSD card slot:



This icon displays onscreen when a microSD card is present and properly inserted into the microSD card slot.

Note

DO NOT remove a microSD card while files are being accessed or transferred. Doing so will result in loss or damage of data.

Make sure your battery is fully charged before using the microSD card. Your data may become damaged or unusable if the battery runs out while using the microSD card.

microSD Settings

Viewing Memory in the microSD Card

- ▶ Highlight and press > **Settings/Tools** > **Tools** > **Mass Storage** > **Memory Info.** > **Card.** (The used and available memory space displays.)

Formatting the microSD Card

Formatting a microSD card permanently removes all files stored on the card.

1. Highlight and press > **Settings/Tools** > **Tools** > **Mass Storage** > **Format Memory Card.**
2. Enter your lock code. (A warning displays.)
3. Press **Format** (left softkey) to remove all the files from your microSD card.

Note

The formatting procedure erases all the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

microSD Folders

Displaying Your microSD Folders

All the files stored in your microSD are accessible through your microSD card folders.

1. With the microSD card inserted, highlight  and press  > *Settings/Tools* > *Tools* > *Mass Storage* > *File Manager* > *Memory Card*.
2. Highlight a folder and press . Your phone creates default folders to store common files:
 - **DCIM** is the default location for pictures and videos, and is created when you launch Camera/Camcorder.
 - **Music** is the default location for sound files or music, and is created when you launch Music.
 - **filestore** is the default storage location for data files.
3. To view or play a file, select it and press  or the appropriate softkey.

Creating Folders in the microSD Card

The following steps allow your phone to create folders for storing files in your microSD card using only the File Manager.

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Mass Storage* > *File Manager* > *Memory Card*.
2. Select *Options* > *Create Folder*.
3. Enter a name for the new folder. (See “Entering Text in Portrait Mode” on page 34 or “Entering Text in Landscape Mode” on page 39.)
4. Press **Done** (left softkey) to save the new folder onto the card.

Connecting Your Phone to Your Computer

Before using your phone's mass storage capabilities, you need to prepare your phone's data services to synchronize with your desktop or laptop computer. Once the phone is connected to the computer, you can transfer your data to or from the microSD card.

Note

No driver is needed for Windows Vista/2000/ME/XP. Other operating systems may require a USB driver that can be downloaded from <http://www.samsung.com/us/support/download/supportDownloadMain.do>.

1. With the phone turned on, plug one end of a compatible USB cable into the phone's Charger/Accessories Jack.
2. Connect the other end of the cable to your computer and turn the phone on.



3. With the microSD inserted, highlight  and press  > **Settings/Tools** > **Tools** > **Mass Storage** > **Connect to PC**. (Wait for the connection. When connected, the host computer will detect your phone automatically.)

– or –

From the USB SETTINGS menu, highlight **Mass Storage** and press .

4. Follow the prompts on your computer screen. If prompted to open a location, select **Open Folder** to access the microSD card contents.

Note

During this connection via the USB port, you will be unable to use your phone to make or receive calls.

Phone Off appears at the upper-left of the screen.

To remove the connection:

- ▶ When you finish transferring data, click the USB device icon on your PC's taskbar and follow the onscreen prompts to safely unplug the USB cable.

– or –

Press **Disconnect** (right softkey) > **Disconnect** (left softkey).

File Manager

View information about folders and files on your phone or on your microSD card. You will also be able to view this information from your computer when it is connected to your phone. (See “Connecting Your Phone to Your Computer” on page 102.)

To view the file structure on the phone or memory card:

1. Highlight  and press  > *Settings/Tools* > *Tools* > *Mass Storage* > *File Manager*.
2. Highlight *Phone* or *Memory Card* and press .
3. Highlight a folder or file and then select it by pressing .
 - Highlight a folder and press  to reveal any subfolders or files.
 - To go up a level from your current folder location, select the grey arrow and press .
 - Highlight a music or picture file and press  to launch the file in its associated application.
 - Highlight a folder or file and press *Options* (right softkey) to select from these options:

- *Send* – to send the currently selected file via either Email or Bluetooth.
- *Delete* – to delete a folder or file.
- *Rename* – to rename a folder or file.
- *Create Folder* – to create a new subfolder within the current location.
- *Sort* – to sort the way the current entries are listed.
- *Folder Info* – to display folder-specific information.
- *Copy* – to copy a file to a different storage location.
- *Move* – to move a file to a different storage location.
- *Find* – to search for a file within the current folder location.

Note

Available options depend on whether you highlight a folder or file.

Important Connection Information

- No driver installation is required for Windows Vista/2000/ME/XP users. Other operating systems may require a USB Mass Storage Driver that can be downloaded from <http://www.samsung.com/us/support/download/supportDownloadMain.do>.
- To avoid loss of data, DO NOT remove the USB cable, the microSD card, or the battery while files are being accessed or transferred.
- DO NOT use your computer to change or edit folder or file names on the microSD, and do not attempt to transfer large amounts of data from the computer to the microSD card. Doing so may cause the microSD card to fail.
- DO NOT turn off or restart your computer, or put it into standby mode, while using a mass storage device. Doing so will result in loss or damage of data.
- While you are connected to the computer, your phone's screen will display "Phone Off." You cannot make or receive calls.
- If you connect a mass storage device to a peripheral device, your device may not work properly.

Camera

- ◆ *Taking Pictures (page 106)*
- ◆ *Recording Videos (page 112)*
- ◆ *Storing Pictures (page 114)*
- ◆ *Sending Pictures and Video via Media Mail (page 116)*
- ◆ *Managing Boost Media Mail (page 118)*
- ◆ *Settings and Info (page 122)*

Taking Pictures


Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. For more information, refer to the online User Guide.

1. Highlight  and press  > *Pictures* > *Camera* to activate camera mode. (Additional camera options are available through the camera mode Options menu. See "Camera Mode Options" on page 109 for more information.)

Shortcut

To activate camera mode, you can also press and hold the camera button. (See illustration on page 14.)

2. Using the phone's main display screen as a viewfinder, aim the camera lens at your subject.
3. Press *Capture* (left softkey), , or . (The picture will automatically be saved in your selected storage area.)
 - To return to camera mode to take another picture, press the camera button.

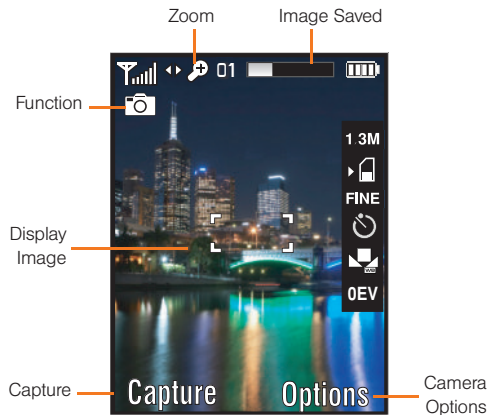

4. Once you've taken your picture, press **Options** (right softkey) for more options:

- **Send Pic/Video** to send the picture to up to 10 contacts at one time. (See page 116 for details.)
- **Camera Mode** to return to the camera to take additional pictures.

- **Upload** to upload the picture to the Media Mail Web site (<https://mediamail.boostmobile.com>). Depending on your settings, you may be prompted to accept a data connection.
- **Assign** to assign the picture as a Picture ID, Wallpaper, or Incoming/Outgoing Calls.
- **Erase** to delete the picture you just took.
- **Review Album** to go to the My Albums folder where you can review your saved pictures.

Assigning Pictures

After taking a picture, assign it as a Wallpaper or as a picture ID for a contact.

1. Take a picture. (See steps 1–3 on page 106.)
2. With the picture displayed, press **Options** (right softkey) > **Assign**, and select an option.
 - **Picture ID** to assign the picture to a Contacts entry. Highlight an entry and press **Assign** (left softkey) to assign the picture.
 - **Wallpapers** to assign the picture as a wallpaper. Press  to assign the picture.

- **Incoming/Outgoing Calls** to assign the picture to display for incoming and outgoing calls.

Tip

You can also assign pictures from the *My Albums* menu. See “In Phone Folder and microSD Card Options” on page 115.

Activating Your Boost Media Mail Account

Activation is an easy process. Simply take a picture and initiate an upload to the Media Mail website.

To activate via the photo Upload process:

1. Take a picture.
2. With the picture displayed, press **Options** (right softkey) > **Upload**.
3. After a few seconds, you will receive an onscreen text message from the Media Mail service providing you with your new Service Password.
4. Press **View** (left softkey) and use your navigation key to scroll down the message.

Tip

Write down your Media Mail service password and keep it in a secure place.

- Your username is your 10-digit phone number.

- Your 4-digit service password (default) is provided via text message by the system upon your initial connection.
- Visit the Media Mail website via your personal computer to review your uploaded images:
<https://mediamail.boostmobile.com>.

To activate via the Online Albums connection process:

1. Highlight  and press  > **Pictures** > **My Albums** > **Online Albums**.
2. If you are asked to connect, follow the onscreen procedures to **Connect**, turn data **On** and press . (Follow any registration prompts and complete your connection.)
3. Press **View** (left softkey) and use your navigation key to scroll down the message. Write down your account information.
 - Your username is your 10-digit phone number.
 - Your 4-digit service password (default) is provided via text message by the system upon your initial connection.

- Visit the Media Mail website via your personal computer to review your uploaded images:
<https://mediamail.boostmobile.com>.

Tip

Write down your Media Mail service password and keep it in a secure place.

After receiving confirmation that your account is successfully registered, you may upload and share pictures and access the Media Mail Web site.

To activate online:

1. Launch your computer's browser and go to this Web address: <https://mediamail.boostmobile.com>.
2. Click the **First time user** link and follow the onscreen instructions.

Camera Mode Options

When the phone is in camera mode, press **Options** (right softkey) to display additional camera options:

- **Selftimer** to activate the camera's timer.
- **Multi Shot** to select an option from the following:
 - **Series Shot** to take multiple shots.
 - **Divided Shot** to take up to 16 images that are then combined into a single picture.
- **Fun Tools..** to select an option from the following:
 - **Fun Frames** to select your favorite fun picture frame to decorate your picture.
(The default setting is **None**.)
 - **Color Tones** to select a wide variety of color tones for the picture. (The default setting is **None**.)
- **Controls..** to set **Brightness**, **White Balance**, **Night Shot**, or **Metering**.
 - **Brightness** to adjust the image brightness level. Press the navigation key up (increase) or down (decrease) to select a setting.
(The default setting is **0**.)

- **White Balance** to adjust white balance based on changing conditions (*Auto, Sunny, Cloudy, Tungsten, Fluorescent, or Manual*). (The default setting is *Auto*.)
- **Night Shot** to activate low light image capture. Enabling this feature allows you to take better quality photos in low light conditions.
- **Metering** to allow the phone to sample the area being photographed and then determine the best light levels. Choose from either **Spot** (a specific area of the image) or **Average** (the entire image is sampled and then an average reading is used).
- **Settings..** to select *Resolution, Quality, Shutter Sound, Status Bar* or *Storage*. (See Camera Mode Options for details.)
- **Launch** to Review Pictures or launch the Camcorder.

Setting the Selftimer

1. From camera mode, press **Options** (right softkey) > **Selftimer**.
2. Highlight the length of delay you want the timer to use (**5 sec** or **10 sec**) and press . (The default setting is *Off*.)

3. Press  when you are ready to start the timer. (The timer displays on the middle-right portion of the display screen during the self-timer countdown).
4. Get ready for the picture. (The phone will beep for each second of the countdown, and the outer LED will blink green. When the timer is down to three seconds, the outer LED will blink red. Just before the picture is taken, the LED turns solid red.)

To cancel the selftimer after it has started:

▶ Press  OR .

Note

While the selftimer is active, all keys are disabled except  and .

Taking Multiple Shots

This feature allows you to take a series of shots in a continuous sequence.

To shoot a series of individual pictures:

1. From camera mode, press **Options** (right softkey) > **Multi Shot** > **Series Shot**.
2. Select one of the following options and press :
 - **Off** to deactivate the multiple shots option.

- 3 to take a series of three pictures.
 - 5 to take a series of five pictures.
 - 10 to take a series of ten pictures .
3. Press **Capture** (left softkey), , or  to take the pictures.

To shoot a series of combined pictures:

1. From camera mode, press **Options** (right softkey) > **Multi Shot > Divided Shot**.
2. Select an option and press :
 - **Off** to deactivate the multiple shots option.
 - **4** to take a series of four pictures to be combined into one image.
 - **9** to take a series of nine pictures to be combined into one image.
 - **16** to take a series of sixteen pictures to be combined into one image.
3. Press **Capture** (left softkey), , or  to take the pictures. (The Multiple Shots folder will display up to nine thumbnail pictures per screen.)

Using the Zoom

This feature allows you to zoom in on an object when you take a picture. Depending on your resolution settings, you can adjust the zoom from 1x to 10x.

1. From camera mode, repeatedly press the navigation key left to zoom out and right to zoom in. It may take several presses to get the desired zoom.

Note

Zooming will not function when the resolution is set to 2M.

2. Press **Capture** (left softkey), , or  to take the picture. (The picture will automatically be saved in your selected storage area.)

Selecting Camera Settings

1. From camera mode, press **Options** (right softkey) > **Settings...**
2. Select an option and press :
 - **Resolution** to select a picture's file size (**2M**, **1.3M**, **High**, **Med**, or **Low**).
 - **Quality** to select the picture quality setting (**Fine**, **Normal**, or **Economy**).

- **Shutter Sound** to select a shutter sound (*Shutter 1 - 4* or *Off*).
- **Status Bar** to turn the status bar *On* (Show) or *Off* (Hide) when in camera mode.
- **Storage** to select the destination for the image files (*Phone* or *Card*).

Recording Videos

In addition to taking pictures, you can also record, view, and send videos to your friends and family with your phone's built-in video camera.


1. Highlight  and press  > *Pictures* > *Camcorder*.
2. Select *Video Mail* or *Long Video* and press .

Note Video Mail can be at most 25 seconds in length, but the length of a Long Video is dependent on both the quality settings and storage type used (phone or memory card) and at most 512Kb is size.

3. Using the phone's display screen as a viewfinder, aim the lens at your subject.

4. Press **Record** (left softkey), , or  to begin recording.
5. Press **Done** (left softkey), , or  to stop recording. (The video is automatically saved to the default folder.)
 - To return to camcorder mode to take another video, press  or .
6. Press **Next** (right softkey) and select an option:
 - **Send Pic/Video** to send the video. (See "Sending Pictures and Video via Media Mail" on page 116.)
 - **Play** to play the video.
 - **Upload** to upload the video to online albums.
 - **Assign** to assign the video as a video ringtone or to voice calls.
 - **Erase** to delete the video.
 - **Camcorder** to return to camcorder mode.
 - **Review Album** to review all pictures and videos saved in the In Phone folder.

Viewing Your Camcorder's Status Area Display

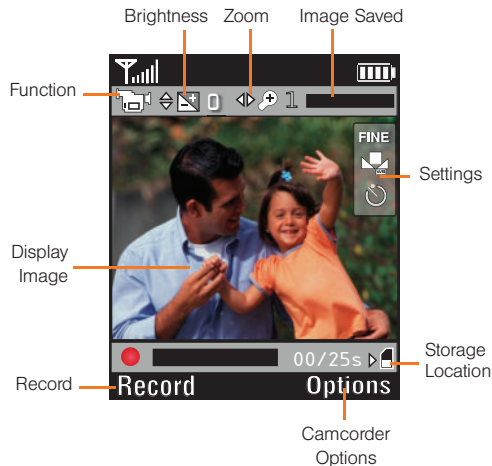

Video Mode Options

When the phone is in camcorder mode, press **Options** (right softkey) to display additional camcorder options:

- **Selftimer** to activate the timer.
- **Fun Tools..** to select from the following options:
 - **Color Tones** to select a variety of color tones for the picture (*None, Monochrome, Sepia, Green, Aqua, or Negative*).
- **Controls..** to select from the following options:
 - **White Balance** to adjust white balance based on lighting conditions. Select from *Auto, Sunny, Cloudy, Tungsten, Fluorescent, or Manual*.
- **Settings..** to select from the following options:
 - **Quality** to select between *Fine, Normal, or Economy*.
 - **Storage** to select the destination for the video files (*Phone or Memory Card*).
 - **Video Length** to select the maximum allowed size for the recording. Choose from *Video Mail* or *Long Video*.
- **Launch** to select from the following options:

- **Review Pictures** to display the videos saved in the In Phone folder. (See “In Phone Folder” on page 114 for details.)
- **Camera** to switch to camera mode. (See “Taking Pictures” on page 106 for details.)

Storing Pictures

Your phone's picture and video storage area is called My Pictures. There are three types of folders in My Albums:

- **Phone**
- **Memory Card**
- **Online Albums**

Storage Options

Pictures and Videos can be configured to be automatically stored within either your In Phone or Memory card locations.

Note *There is a limited amount of storage space available within the phone. A microSD card provides a larger storage capacity and can be easily upgraded in size if necessary.*

1. Highlight  and press  > **Pictures** > **Settings and Info** > **Auto Save to**.
2. Highlight **Phone** or **Memory Card** and press .

In Phone Folder

Your phone's internal storage area is called the In Phone folder. From the In Phone folder, you can view all the pictures you have stored there, send items to the Media Mail site (<https://mediamail.boostmobile.com>), delete files, and access additional options.

To review your stored pictures and videos in the In Phone folder:

1. Highlight  and press  > **Pictures** > **My Albums** > **In Phone**.
2. Use your navigation key to view and scroll through the pictures.

microSD Picture and Video Folders

You can save pictures and videos directly to the microSD card using your phone's pictures and videos settings.

To review your stored pictures and videos on the microSD card:

1. Highlight  and press  > *Pictures* > *My Albums* > *Memory Card*.
2. Use your navigation key to view and scroll through the pictures and videos.

In Phone Folder and microSD Card Options

When you are viewing the In Phone folder or the microSD card folders, press **Options** (right softkey) to display the following options:

- **Play** to play a selected video.
- **Send** to send an image or video to another user using Media Mail or to a Bluetooth-enabled device.
- **Upload** to upload pictures to the Media Mail Web site (<https://mediamail.boostmobile.com>.) (Depending on your settings, you may be prompted to accept a data connection.)

Note If this is the first time you have accessed Media Mail, you will be prompted to register your Media Mail account.

- **Assign** to assign the current image as a Picture ID for a contact, Wallpaper, or to Incoming/Outgoing Calls, or assign the current video as a Video Ringtone for a contact, or to Voice Calls.
- **Erase** to erase the image or selected images.

Note Deleting pictures will free up memory space in your phone to enable you to take more pictures. Once deleted, pictures cannot be uploaded to your online Media Mail account.

- **Copy/Move** to copy or move an image or video to an installed memory card.
- **Detail/Edit** to attach a text caption or view the media information associated with the image.
- **Album list** to display the list of albums saved in your phone.
- **Media Filter** to display either **All** media types, **Pictures Only**, or **Videos Only**.
- **Camera/Camcorder Mode** to switch to either the camera or camcorder mode.

Online Albums

Once a picture is taken, it is automatically saved to the preselected folder (*In Phone* or *Memory Card*).

Alternatively, you can save pictures to your Online Albums folder. From the Online Albums folder, you can view all the pictures you have taken, move selected images to your In Phone folder, delete images, and access additional picture options.

Note Before you can use the Online Albums folder, you must first go online and create a Media Mail account and password.

To review pictures in the Online Albums folder:

1. Highlight  and press  > *Pictures* > *My Albums* > *Online Albums*.
2. Use your navigation key to scroll through and view the pictures.

Sending Pictures and Video via Media Mail

Once you have taken a picture, you can use the messaging capabilities of your phone to instantly share it with family and friends. You can send a picture to up to 25 people at a time using their email addresses or their phone numbers.

Sending Pictures From the In Phone Folder or Memory Card

1. Highlight  and press  > *Pictures* > *My Albums* > *In Phone* or *Memory Card*.
2. Highlight a picture to send and press .
(The check box in the upper left corner will be marked. You can select multiple pictures and videos.)
3. Press *Options* (right softkey) > *Send* > *via Media Mail* to then choose a current Contacts entry.
 - You can also choose to upload the currently selected image to a Bluetooth device (page 126).

Note The first time you send Media Mail, you will be prompted to register your Media Mail account. See "Activating Your Boost Media Mail Account" on page 108.

4. Select a Contacts entry by highlighting it and pressing .
 - Press *New Addr* (right softkey) to manually enter a wireless phone number or email address and press *Continue* (left softkey).

– or –

Enter additional recipients by pressing **Multiple** (left softkey), placing a checkmark beside a desired entry, and press **Continue** (left softkey).

5. Press **Continue** (left softkey) when you are finished adding recipients.
6. If you wish to include a subject, scroll to **Subj:** and press **Add** (right softkey). Enter your subject and press **Next** (left softkey) to save and exit.
7. If you wish to include a text message, scroll to **Text:** and press **Add** (right softkey). Enter your message (or press **Options** [right softkey] to select **Preset Message** or **Recent Msg**) and press **Next** (left softkey) to save and exit. (See “Entering Text in Portrait Mode” on page 34 or “Entering Text in Landscape Mode” on page 39.)
8. To include a voice memo (audio message) with the picture, highlight the box next to **Audio** and press .
 - Press **Record** (left softkey) or press  to start recording. (Maximum recording time is 10 seconds.)

- Press **Done** (left softkey) to end the recording and return to the Media Mail message.

9. Confirm the recipients, message, audio message, and picture.
 - To change a recipient, select the recipient, press the appropriate softkey, and follow the instructions in step 5 to select or edit the recipient.
 - To change the text message, scroll to **Text** and press the appropriate softkey.
 - To change the voice memo, highlight **Audio** and press the appropriate softkey.
 - To change the attached picture(s), select the current thumbnail picture and press **Change** (right softkey).
 - Highlight the picture you wish to send and press .
10. Press **Send** (left softkey) to send the message.

Sending Pictures From Messaging

You can also send Media Mail from your phone's Messaging menu.

1. Highlight  > *Send Messages* and press  > *Media Mail* to access the Messaging menu.

– or –

Highlight  and press  > *Messaging* > *Send Messages* > *Media Mail*.

2. Highlight a Contacts entry and press .

– or –

Press *New Addr* (right softkey) and enter a mobile number or an email address, then press *Continue* (left softkey).

– or –

Press *Multiple* (left softkey) and place a check mark beside desired entries, then press *Continue* (left softkey).

3. Select the location of the image *In Phone*, *Memory Card*, *Online Albums*, *Take New Picture*, *Take New Video*, or *Text Only* and press .

4. Highlight a picture or video you wish to send and press . (The check box on the upper left corner will be marked. You can select multiple pictures.)

5. Press *Next* (left softkey).

6. To complete and send the message, follow steps 5–10 in “Sending Pictures From the In Phone Folder or Memory Card” on page 116.

Managing Boost Media Mail

Using the Media Mail Website

After uploading pictures or videos to your online Media Mail account at <https://mediamail.boostmobile.com>, you can use your computer to manage your pictures. From the Media Mail website, you can share pictures, edit album titles, add captions, and organize images.

With Media Mail, you also have access to picture management tools to improve and customize your pictures. You can lighten, darken, crop, add antique effects, add comic bubbles and cartoon effects, and use other features to transform your pictures.

To access the Media Mail Web site:

1. From your personal computer, go to <https://mediamail.boostmobile.com>.
2. Enter your phone number and Media Mail service password to register. (See “Activating Your Boost Media Mail Account” on page 108.)

Note The default service password would have been sent to you via text message upon your initial connection to the Media Mail server.

Managing Online Pictures From Your Phone

Use your phone to manage, edit, or share pictures you have uploaded to the Boost Media Mail Web site at <https://mediamail.boostmobile.com>. (See “In Phone Folder” on page 114 for information about uploading.)

To view your online pictures from your phone:

1. Highlight  and press  > **Pictures** > **My Albums** > **Online Albums**. (Depending on your settings, you may be prompted to accept a data connection). The Uploads folder and your albums are displayed.

Note

To expand a selected picture from thumbnail to full-screen, press **Expand** (left softkey).

2. Highlight a picture and press **Options** (right softkey) to display your online picture options.

Uploading Pictures

1. Highlight  and press  > **Pictures** > **My Albums** > **In Phone** or **Memory Card**. (Pictures are displayed as thumbnails.)
2. Select a picture or pictures to upload by highlighting the image and pressing .
3. Press **Options** (right softkey) > **Upload** > **My Uploads** or **My Albums**. This queues your file(s) for uploading.
4. Press **Continue** (left softkey) to return to the previous page.

Downloading your Online Pictures

From your online Boost Media Mail albums at <https://mediamail.boostmobile.com>, you can select pictures to download to your **In Phone** or **Memory Card** locations.

1. From the online pictures display, place a check mark on the picture(s) you wish to download, and press **Options** (right softkey). (See “Managing Online Pictures From Your Phone” on page 119.)
2. Highlight **Assign** and press .
3. Select an option and press .
 - **Picture ID** to download and assign the selected picture as a Picture ID.
 - **Wallpapers** to download and assign the selected picture as a wallpaper.
 - **Incoming/Outgoing Calls** to assign the selected picture to display for callers that have no Picture ID assigned.

Sending Images Using Online Media Mail

To send pictures using the online Address Book:

1. From the online Media Mail display at <https://mediamail.boostmobile.com>, select a picture and click the Send Media Mail button. (See “Managing Online Pictures From Your Phone” on page 119.)

2. Drag pictures to the New Message area of the new Media Mail and click **Continue**, then select **Address Book**.
3. Select recipient(s) from your Online Address Book.
4. When you have finished selecting recipients, select **Send Media Mail**.

To create an album online:

1. Click the **Picture/Video** tab to display all your currently-uploaded images and videos.
2. Navigate to the **Other Options** section of the page.
3. Click the **Create New Album** link, enter a name for the new album, and click **OK**.

To place files into an existing album:

1. Navigate to the **Other Options** section of the **Pictures/Videos** tab (at the lower right of the page).
2. Click the **Move/Copy Media** link.
3. Select the source of the files.
4. Place a check mark on images you wish to add to your Album.

5. Select whether to **Copy** or **Move** the selected *images*.
6. Select an existing album and click **OK**.

To send an album from the online pictures menu:

1. Navigate the **Other Options** section of the **Pictures/Video** tab (at the lower right of the page). (See “Managing Online Pictures From Your Phone” on page 119.)
2. Click **Share Album**.
3. Select recipient(s) from your Online Address Book.
4. Enter an invitation message.
5. Click **Share Album** to send your Boost Media Mail album to the selected recipient(s).

Accessing Online Picture Options From Your Phone

1. Highlight  and press  to access the main menu.
2. Select a picture from **Pictures > My Albums > Online Albums**.

3. Press **Options** (right softkey) to display the picture options.

– or –

Press **Expand** (left softkey) to expand the selected picture.

4. Highlight an option and press .
 - **Send** to send the picture or video to another user using Media Mail.
 - **Assign** to set the picture as a Picture ID, Wallpaper, or for Incoming/Outgoing Calls.
 - **Save to Phone** to save the picture to your phone.
 - **Erase** to delete the picture.
 - **Copy/Move** to copy or move the selected picture, or all pictures.
 - **Detail/Edit** to attach a text caption or view the properties of the picture.
 - **Album list** to display a list of albums.
 - **Media Filter** to choose to view pictures only or videos only, or all.
 - **Camera Mode** to launch the Camera.

To access your online Albums options from your phone:

1. Display the album list in the online Boost Media Mail menu. (See “Managing Online Pictures From Your Phone” on page 119.)
2. Select an album.
3. Press **Options** (right softkey) to display options.
4. Select an option and press .
 - **Send** to send the album through the boost Media Mail Web site.
 - **New Album** to create a new album. Enter a new album name and select **Next** (left softkey). If you have additional albums, you have additional options:
 - **Rename Album** to rename a selected album.
 - **Erase Album** to delete an existing album.
 - **Album Info** to display information about the album. You can view the album's name, creation date, and the number of pictures and videos in the album.

Settings and Info

This menu allows you to configure where pictures are saved, or set the view between portrait or landscape mode.

1. Highlight  and press  > **Pictures** > **Settings and Info**.
2. Select one of the following options and press .
 - **Auto Save to** to choose between **Phone** and **Memory Card** as the default location to save pictures or videos.
 - **Status Bar** to select whether the Status Bar displays onscreen when the camera/camcorder is active.
 - **Account Info** to display your current Media Mail account settings via an online connection.

Bluetooth

- ♦ *Turning Bluetooth On and Off (page 123)*
- ♦ *Using the Bluetooth Settings Menu (page 124)*
- ♦ *Pairing Bluetooth Devices (page 125)*
- ♦ *Sending Items via Bluetooth (page 126)*

About Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, and wireless phones. The Bluetooth communication range is usually up to approximately 30 feet.

Turning Bluetooth On and Off

By default, your device's Bluetooth feature is turned off. Turning Bluetooth on makes your phone "discoverable" by other in-range Bluetooth devices.

To turn Bluetooth on:

1. Highlight  and press  > *Bluetooth* > *More...* > *Settings* > *On/Off*.
2. Highlight *On* and press  to enable Bluetooth.

To turn Bluetooth off:

1. Highlight  and press  > *Bluetooth* > *More...* > *Settings* > *On/Off*.
2. Highlight *Off* and press  to disable Bluetooth.

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



Bluetooth is hidden.



Bluetooth is visible (active and enabled).



Bluetooth is visible and connected to a device or transferring data.



Bluetooth is active and connected to a stereo Bluetooth Headset.

Using the Bluetooth Settings Menu

The *Bluetooth Settings* menu allows you to set up many of the characteristics of your phone's Bluetooth service, including:

- Entering or changing the name your phone uses for Bluetooth communication.
- Setting your phone's visibility (or "discoverability") to other Bluetooth devices.
- Displaying your phone's Bluetooth address.

To access the Bluetooth Settings menu:

1. Highlight  and press  > *Bluetooth* > *More... > Settings*.
2. Set your Bluetooth options.
 - Select *Visibility* > *Always visible*, *Visible for 3 min*, or *Hidden* to set your Bluetooth visibility.
 - Select *My Device Name* to rename your phone for Bluetooth.
 - Select *My Device Info* to display your phone's Bluetooth profiles and address.
 - Select *Exchange Folders* to display your phone's Bluetooth destination folder for files transferred between your phone and a Bluetooth-enabled device using the FTP transfer protocol.
 - Select *Voice Priority* to set your phone's Bluetooth communication priority for incoming and outgoing calls.

To access the Trusted Devices list:

- ▶ Highlight  and press  > *Bluetooth* > *Trusted Devices*.
- This displays your phone's current list of external trusted Bluetooth devices.

Pairing Bluetooth Devices

Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

Note Refer to the manufacturer's documentation to obtain the passkey for any other devices. In most instances, this passkey is "0000" or the last four digits of the telephone number.

To pair your phone with another Bluetooth device:

1. Highlight  and press  > **Bluetooth** > **Add a New...**
2. Select a device category and press . (Your phone will display a list of discovered in-range Bluetooth devices.)
 - Select from: *Headset/Car Kits, All, Phone, or PC.*

3. Highlight a device and press . Select **Info** (right softkey) to obtain more information about the device prior to pairing.
4. Enter the passkey and press .
5. Once added, highlight the new entry and press **Options** (right softkey) > **Edit Name**, enter a unique Device Name and press **Done** (left softkey).

Note Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Pairing With a Computer

To pair with a computer's Bluetooth interface, allow the computer to initiate pairing with your phone.

To allow your phone to be paired with another Bluetooth device:

1. Highlight  and press  > **Bluetooth** > **Add a New...** > **PC.**
2. Follow the onscreen prompts to enter your passkey and press .

Sending Items via Bluetooth

Depending on your paired devices' settings and capabilities, you may be able to send pictures, Contacts information, or other items using a Bluetooth connection.

To send contacts information via Bluetooth:

1. Highlight  and press  > *Contacts*.
2. Highlight an entry and press *Options* (right softkey) > *Send Contact*.
3. Place a checkmark next to the Contact entry you want to send by first selecting an entry and pressing .
4. Press *Send Contact* (left softkey). (The phone begins searching for available Bluetooth devices. Bluetooth-capable phones are indicated by an adjacent phone icon.)
 - If the device isn't in the list, select *Options* (right softkey) > *Search again*.
5. From the list of Found Devices, highlight the target Bluetooth device and press *Select* (left softkey).

6. Select *Yes* and press . (The recipient's device displays an onscreen message asking whether they would like to receive and save your Contact entry to their list.)
7. The recipient must either accept and save the contact, or reject the incoming data.

To send pictures via Bluetooth:

1. Highlight  and press  > *Pictures* > *My Albums*.
2. Select an album (*In Phone*, *Memory Card*, or *Online Albums*) and press .
3. Select a picture by highlighting it and then pressing . This places a checkmark on the image.
4. Press *Options* (right softkey) > *Send* > *via Bluetooth* > *Yes*. (The phone begins searching for available Bluetooth devices. Bluetooth-capable phones are indicated by an adjacent phone icon.)
5. From the list of Found Devices, select the Bluetooth device and press .

6. Select **Yes** and press . (The recipient's device displays an onscreen message asking whether they would like to receive and save your image.)
7. The recipient must either accept and save the image, or reject the incoming data.

Section 3
Service

Service Features: The Basics

- ◆ Voicemail (page 130)
- ◆ Text Messaging (SMS) (page 132)
- ◆ Caller ID (page 135)
- ◆ Call Waiting (page 135)
- ◆ Making a Three-Way Call (page 135)
- ◆ Call Forwarding (page 136)

Now that you've explored your phone's fundamentals, it's time to learn about the calling features that enhance your service.

This section outlines your basic service features.

Voicemail

Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Voicemail and personal greeting as soon as your phone is activated.

1. Press and hold .
2. Follow the system prompts to:
 - Create your passcode.
 - Record your name announcement.
 - Record your greeting.
 - Choose whether to activate One-Touch Message Access (a feature that lets you access messages by pressing and holding , bypassing the need to enter your passcode).

Note

Vicemail Password

If you are concerned about unauthorized access to your voicemail account, Boost recommends that you enable your voicemail passcode. (Do not activate One-Touch Message Access.)

Vicemail Notification

There are several ways your phone alerts you to a new message:

- By displaying a message on the screen.
 - Press **Listen** (left softkey) to hear the voicemail messages.
 - Press **Dismiss** (right softkey) to ignore onscreen notification and return to the One Click screen.
- By sounding the assigned ringtone type.
- By the LED blinking red.
- By displaying  at the top of your screen.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

To call your voicemail:

- ▶ Press and hold .

To display your Missed Log:

- ▶ Highlight  and press  > **Missed Alerts**.

Note

Your phone accepts messages even when it is turned off. However, you are notified of new messages only when your phone is turned on.

Retrieving Your Voicemail Messages

You can review your messages directly from your wireless phone or from any other touch-tone phone. To dial from your wireless phone, either speed dial your voicemail or use the menu keys.

Using One-Touch Message Access

- ▶ Press and hold . (Your phone will dial your voicemail box.)

Using the Menu Keys on Your Phone to Access Your Messages

- ▶ Highlight  and press  > *Messaging* > *Voicemail* > *Call Voicemail*.
– or –
Select  > *Voicemail*.

Note You are charged for airtime minutes when you are accessing your voicemail from your wireless phone.

Using Another Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press #.
3. Enter your passcode.

Tip When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press 4 during the header.

Text Messaging (SMS)

With Text Messaging, you can send and receive text messages between your wireless phone and another messaging-ready phone. When you receive a new message, it automatically displays on your phone's screen.

In addition, Text Messaging includes a variety of preset messages, such as “I am running late” that make composing messages fast and easy. Use your phone to customize your own preset messages (up to 128 characters).

Note Creating messages can also be accessed from the Main Menu > Messaging.

Refer to your service plan for applicable messaging charges.

Tip You can instantly access all your phone's messaging options, including Text Messaging, using the main screen carousel. See “Navigating the Main Screen” on page 44.

Composing Text Messages

1. Select  > *Send Messages* > *Text Message*.
 - or –Highlight  and press  > *Messaging* > *Send Messages* > *Text Message*.
2. Select an existing Contact (*Go to Contacts*).
 - **Contacts** to select a recipient from your Contacts (qualifying Contacts entries must contain a wireless phone number or an email address).
 - or –Press **New Addr** (right softkey) to manually enter either a phone number or email address.
 - **Phone Number** to use the keypad to enter a wireless phone number directly.
 - **Email Address** to enter the recipient's email address.
 - or –Press **Multiple** (left softkey) to select more than one recipient and press .

3. Press **Continue** (left softkey) when you have finished entering recipients. (You may include up to 10 recipients per message.)
4. Enter a message or use the preset messages or emoticons (smileys).
 - To type a message, use the keypad or keyboard to enter your message. (See “Entering Text in Portrait Mode” on page 34 or “Entering Text in Landscape Mode” on page 39.)
 - To use a preset message, press **Options** (right softkey), select **Add Preset Message**, and then select a message and press .
 - Select additional options by pressing **Options** [right softkey] to **Set Callback #** or **Mark as Urgent**.
5. Press **Send** (left softkey) to deliver your message.

Accessing Text Messages

To read a text message:

- When you receive a text message, it displays automatically on your phone's screen. Use your navigation key to scroll down and view the entire message.

To reply to a text message:

1. While the message is open, press *Reply* (left softkey).
2. Compose your reply or use the preset messages or icons.
 - To type a message, use your keypad to enter your message. Use the right softkey to select an input mode. (See “Entering Text in Portrait Mode” on page 34 or “Entering Text in Landscape Mode” on page 39.)
 - To use a preset message, press *Options* (right softkey), select *Add Preset Message*, and then select a message and press .
 - To use a symbol, press *Options* (right softkey), select *Text Mode > Symbols*, press the number that corresponds to your selected symbol and press .
 - To use a smiley, press *Options* (right softkey), select *Insert Smiley*, and then select a message and press .
 - You may select additional messaging options by pressing *Options* [right softkey] to *Set Callback #* or *Mark as Urgent*.

3. Press *Send* (left softkey) to deliver your message.

Using Preset Messages

Preset messages make sending text messages to your friends, family, and co-workers easier than ever.

To add or edit preset messages:

1. Highlight  and press  > *Messaging* > *Settings* > *General* > *Preset Messages*.
2. Press *Options* (right softkey) > *Add New*.
 - or –
 - Select a message and press *Options* > *Delete*.
 - or –
 - Edit an existing message by pressing *Edit* (left softkey).
3. Enter your new message or changes and press . (See “Entering Text in Portrait Mode” on page 34 or “Entering Text in Landscape Mode” on page 39.)

Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call.

To block your phone number from being displayed when you make a call:

1. Press .
2. Enter the number you want to call.
3. Press .

To permanently block your number, call Boost Customer Care at **1-888-BOOST-4U (1-888-266-7848)**.

Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- ▶ Press . (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- ▶ Press again.

Tip

For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing before placing your call. Call Waiting is automatically reactivated once you end the call.

Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call and press .
2. Once you have established the connection, press **Options** (right softkey) > **3-Way Call** and press .
3. Choose the second number by selecting one of the following:

- **Contacts** to select a recipient from your Contacts (qualifying Contacts entries must contain a wireless phone number or an email address).
- **Recent History** to select a number from your Recent History entries.
- **Enter Phone #** to use the keypad to enter a wireless phone number directly.

4. Press . (This puts the first caller on hold and dials the second number.)
5. When you're connected to the second party, press **Join** (right softkey) to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

To activate Call Forwarding:

1. Press  **Shift**  **PQRS**  **ABC**.
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press . (You will hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:

1. Press  **Shift**  **PQRS**  **ABC**  **Next**.
2. Press . (You will hear a tone to confirm the deactivation.)

Note

Refer to your service plan for call forwarding rates; additional charges may apply.

Web and Data Services

- ◆ *Data Applications (page 137)*
- ◆ *Getting Started With Data Services (page 138)*
- ◆ *Accessing Messaging (page 142)*
- ◆ *Downloading Games, Ringtones and More (page 145)*
- ◆ *Exploring the Web (page 147)*
- ◆ *Data Services FAQs (page 152)*

Data Applications

Here is a brief list of the applications available through your phone.

Pictures and Media Mail – Instantly shoot and share digital pictures.

Messaging – Send and receive email messages and instant messages and participate in online chat discussions on your wireless phone.

Games – Play exciting games with full-color graphics, sound, and vibration. Choose from hundreds of games to play anytime.

Ringtones – Personalize your phone by downloading and assigning different ringtones to numbers in your Contacts.

Wallpapers – Download unique images to use as a wallpaper, or make it easy to tell who's calling by assigning specific images to numbers in your Contacts.

Web – Experience full-color graphic versions of popular Web sites from your phone.

Getting Started With Data Services

With your Boost service, you are ready to start enjoying the advantages of data services. This section will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your phone.

Your User Name

When you buy your phone and sign up for service, you're automatically assigned a user name, typically based on your name and a number, followed by "@myboostmobile.sprintpcs.com." (For example, the third John Smith to sign up for Boost data services might have *jsmith003@myboostmobile.sprintpcs.com* as his user name.)

When you use Boost data services, your user name identifies you to the Nationwide Sprint Network.

Your user name will be automatically programmed into your phone. You don't have to enter it.

Finding Your User Name

If you aren't sure what your user name is, you can easily find it on your phone.

- ▶ Highlight  and press  > *Settings/Tools* > *Settings* > *Phone Info* > *Phone Number*.

Updating Your User Name

If you choose to change your user name and select a new one online, you must then update the user name on your phone.

- ▶ Highlight  and press  > *Settings/Tools* > *Settings* > *More...* > *Data* > *Update Data Profile*.
(To cancel, press *Cancel* [right softkey] before completing the update.)

Launching a Data Connection

- ▶ Highlight  > **Home** and press .

– or –

Highlight  and press  > **Web**. (Your data connection starts and the home page displays.)

Note *If Data usage is turned Off, this feature will need to be re-enabled prior to use (page 69).*

While connecting, an animation and a “Connecting” message may display.

Tip *For instant access to the Internet, including the Boost home page, Bookmarks, Recent Pages, and search, use the main screen carousel. See “Navigating the Main Screen” on page 44.*

Tip *To change the default launch page to the last page you viewed, from the browser, press **Menu** (right softkey) > **Mark this page** and select **Set this as my homepage**, select **Save** and press **OK**.*

Data Service Functionality

Using the Data Services function you can turn wireless data access on or off.

Some applications, such as AccuWeather, communicate with the network periodically and can use your data minutes as well as extra battery power. Deactivating Data Services stops the phone from automatically using those minutes to communicate with the network.

To receive the most efficient use of your data minutes, enable Data Services each time you want to use a data service and disable it when you are finished.

To activate/deactivate data services:

- ▶ Highlight  and press  > **Settings/Tools** > **Settings** > **More...** > **Data** > **On/Off**.
 - Select **On** to activate this feature.
 - Select **Off** to deactivate this feature.

Data Connection Status and Indicators

Your phone displays the current data connection status with indicators at the top of the screen:

 Your data connection is active (data is being transferred); the transmit/receive symbol will blink  to indicate data transmission. During data usage, you can receive incoming voice calls or SMS messages; outgoing voice calls can be made, but the data services connection will terminate.

 Your data connection is dormant (no data is being sent or received). Though not currently active, when dormant the phone can restart an active connection quickly; voice calls can be made and received.


If no indicator displays, the data connection is not active. To launch a connection, see “Launching a Data Connection” on page 139.

Navigating the Web

Navigating menus and Web sites during a data session is easy once you’ve learned a few basics.

Softkeys

During a data session, the bottom line of your phone’s display contains shortcut controls for navigating the Web, which correspond to the softkeys directly below the display.

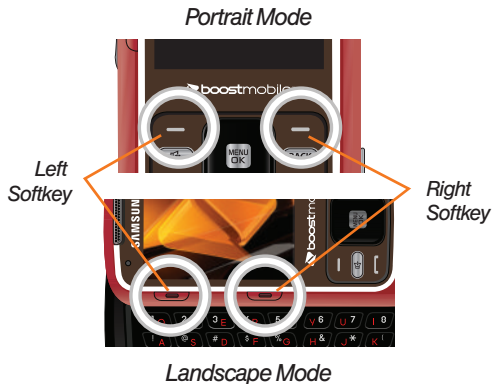

Tip

Depending on which Web sites you visit, the labels on the softkeys may change to indicate their function.

To use softkeys:

- ▶ Press a softkey. (If an additional pop-up menu displays when you press the softkey, select the menu items using your keypad [if they're numbered], or by highlighting the option and pressing .)

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.

To scroll line by line through Web sites:

- ▶ Press the navigation key up and down.

To scroll page by page through Web sites:

- ▶ Press the volume buttons on the side of the phone.

Selecting

Once you've learned how to use softkeys and scroll, you can start navigating the Web.

To select onscreen items:

- ▶ Use the navigation key to highlight an item, and then press the left softkey (or press ).

Tip

You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "OK."

If the items on a page are numbered, you can use your keypad (number keys) to select an item.

Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

To select links:

- ▶ Highlight the link and press the appropriate softkey.

Going Back

To go back one page:

- ▶ Press  or .

Note

The BACK key is also used for deleting text (like a BACKSPACE key) when you are entering text.

Going Home

To return to the home page from any other page:

- ▶ Press *Menu* > *Home*.

Accessing Messaging

You can send and receive email messages, instant messages, and text messages and participate in Web-based chat rooms right from your phone. Messaging allows you to stay connected 24 hours a day anywhere on the Nationwide Sprint Network.

Using Email

Your phone's Email application lets you access and manage multiple email accounts simultaneously in one convenient location.

Getting Started With Email

1. Select  > *Email*.
 - or –
 - Highlight  and press  > *Messaging* > *Email*.
2. Select an email provider (such as *AOL® Mail*, *AIM Mail®*, *Hotmail®*, *Yahoo!® Mail*, *Gmail®*) and press .
 - or –
 - Select *More...* to choose from additional options (*Other IMAP* or *Other POP*).
3. Follow the setup wizard instructions to enter the required sign-up information and press . Press *Accept* (right softkey) if you are prompted to accept any license agreements or disclaimers.

Note

The information required to sign in will vary depending on the email provider you are accessing.

4. If applicable, read the notice regarding Mail Push. To enable Mail Push, press *Yes* (right softkey). If another notice appears, review it and press *Yes* (right softkey) again to enable Mail Push.

Note

Mail Push allows your phone to automatically retrieve new email messages without having to select the Check Mail option. When you enable Mail Push, you receive an onscreen notice of new email messages. These notices may be charged as Text Messages. Please consult your service plan for details.

Note

Mail Push allows your phone to automatically retrieve new email messages without having to select the **Send/Receive** option. When you enable Mail Push, you receive an onscreen notice of new email messages. These notices may be charged as Text Messages. Please consult your service plan for details.


Creating an Additional Email Account

1. Select  > *Send Messages* > *Email*.

– or –

Highlight  and press  > *Messaging* > *Email*. (The default email account Inbox displays.)

2. Press the navigation key to select the *Home* tab and press .
3. Select *Add Account* and press .
4. Follow the procedures outlined in “Getting Started With Email” on page 142.

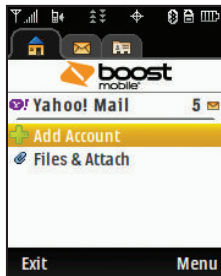

Accessing Email

Using Email on your phone is even easier than using multiple email accounts on your computer. Launch the application for instant access to all your accounts.

Note

The procedures below are subject to the application updates.

1. Select  > *Email*.

– or –

Highlight  and press  > *Messaging* > *Email*. (The default email account Inbox displays).

2. Press the navigation key to select the *Home* tab and press .
3. Select your desired email account and press .

4. Use your keypad and navigation keys to read, manage, and create your own emails.
5. Press **Menu** (right softkey) to select messaging options.
 - Choose from: *Delete, Compose, Check Mail, Send Mail, Reply to (Sender or All), Save, Call Sender, or Mark as (Unread or Read).*
 - Press the left navigation key to select the **Home** tab and press .
 - To add a new account, return to the home page and repeat the steps to setup a new email account. Follow the instructions in "Creating an Additional Email Account" on page 143 to set up a new account.

Tip You can also customize your main screen carousel to provide direct access to your email. See "Personalizing the Carousel" on page 46 for details.

Accessing Instant Messaging

Data services also provides you with access to popular instant messaging (IM) clients, including AOL® Instant Messenger™, MSN® Messenger, and Yahoo!® Messenger.

1. Select  > **Send Messages** > **IM**.
– or –
Highlight  and press  > **Messaging** > **IM**.
2. Select an IM provider, such as *AOL Instant Messenger, Windows Live Messenger, or Yahoo! Messenger* and press .
3. Use your keyboard to enter the required sign-in information for the selected provider, such as user name or password, select **Sign In** (left softkey) and press **Go** (left softkey). (Your IM screen for the selected provider displays.)

Note The information required to sign in will vary depending on the instant messaging provider you are accessing.

Services may be available for an additional subscription fee. Visit www.boostmobile.com or call Boost Customer Care for additional information.

Note In the case of MSN Messenger, the left softkey reads 'Accept'.

4. Follow the onscreen instructions to read, reply to, compose, and send messages and manage your IM account.

Accessing Wireless Chatrooms

Data services gives you the ability to join wireless dating chatrooms from your phone. For additional chatroom services, refer to the online User Guide.

1. Highlight  and press  > *My Stuff* > *Chat Flirt Fun*.
2. Select a chat provider and follow the onscreen instructions to sign up and begin chatting.

Note

Since *Chat Flirt Fun* options change frequently, check back often to see what's new.

Downloading Games, Ringtones and More

You have access to a dynamic variety of downloadable content, such as Games, Ring Tones, Wallpapers and other applications (additional charges may apply.) follow the basic steps below to access and download these items.

Accessing the Download Menus

1. Select  and press .
2. Select the type of file you wish to download: *Ringtones*, *Games*, *Applications*, then press . (The browser will start and take you to the download menu.)

To access the download menus from the Web browser:

1. From the Boost home page, select *Downloads*.
2. Select *Applications*, *Games*, *Ringtones*, or *Wallpaper* to go to the corresponding download menu. (For more information on navigating the Web, see "Exploring the Web" on page 147.)

Selecting an Item to Download

You can search for available items to download in a number of ways:

- **Featured** displays a rotating selection of featured items.
- **Categories** allows you to narrow your search to a general category, such as Country or Pop/Rock for Ringtones or For the Ladies for Screen Savers. (There may be several pages of available content in a list. Select **Next 9** to view additional items.)
- **Search** allows you to use your keypad to enter search criteria to locate an item. You may enter an entire word or title or perform a partial-word search.

Downloading an Item

Once you've selected an item you wish to download, highlight it and press . You will see a summary page for the item including its title, the vendor, the download details, the file size, and the cost. Links allow you to view the **License Details** page, which outlines the price, license type, and length of license for the download, and the **Terms of Use** page, which details the

Premium Services Terms of Use and your responsibility for payment.

To download a selected item:

1. From the item's information page, select **Buy** and press . (The item will download automatically. When the **New Download** screen is displayed, the item has been successfully downloaded to your phone.)

Note

If you have not previously purchased an item, you will be prompted to create your purchasing profile.

Services may be available for an additional subscription fee. Visit www.boostmobile.com or call Boost Customer Care for more information.

2. Select an option to continue:
 - Select **Use/Run/View** to assign the downloaded item (or to start, in the case of a game or an application). Your data session will end, and you will be redirected to the appropriate phone menu screen.

Note

*With Ringtones, the **Listen** option is available.*

- Select **Set as** to assign a ringer or screen saver to a phone function.
- Select **Shop** to browse for other items to download.
- Press  to quit the browser and return to standby mode.

For complete information and instructions for downloading Games, Ringtones, Wallpapers, and Applications, visit us at www.boostmobile.com.

Important

Important Privacy Message - Boost's policies often do not apply to third-party applications. Third-party applications may access your personal information, or require Boost to disclose your customer information to the third-party provider. To find out how a third-party application will collect, access, use or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

Exploring the Web

With Web access on your phone, you can browse full-color graphic versions of your favorite Web sites, making it easier than ever to stay informed while on the go. Follow sports scores, breaking news, and weather, and shop, right on your phone .

In addition to the features already covered in this section, the home page offers access to these colorful, graphically rich Web categories, including **News**, **Weather**, **Entertainment**, **Sports**, **Money**, **Travel**, **Shopping**, and **Tools**, as well as useful management options including **My Account** and **Search**. Many sites are available under more than one menu – choose the one that's most convenient for you.

Launching Facebook via the Carousel

This page provides quick access to your Facebook® page.

1. Highlight  and press .
2. Use the navigation key to select both the email address and password fields, then enter the

appropriate information by using the keyboard and press .

3. Highlight **Log In** and press .

Launching Re-Boost

To add money to your account and increase your available minutes, you must access the Re-Boost function via the phone or online.

- ▶ Highlight  and press .
- or –

Highlight  and press  > **Re-Boost**.

To locate your nearest Re-Boost location:

1. Highlight  and press  > **Re-Boost Locator**.
– or –
Highlight  and press  > **Re-Boost**.
2. Use your keyboard to enter your current zip code.
3. Press **Menu** > **Accept** to display a list of nearest locations providing the re-boost service. Scroll down to see all listings.

To obtain additional Re-Boost and account information:

1. Highlight  and press .
2. Highlight any onscreen option and press 
 - **Call Balance** to view your current account balance.
 - **Call Re-Boost** to view your current Re-Boost prepaid minute balance.
 - **My Account** to view your detailed account information.

To obtain additional information :

- ▶ Highlight  and press  > **Home** > **Re-Boost Locator**.
– or –
Highlight  and press  > **Home** > **Check Your Balance**.

Launching HOOKT (Wireless Chatrooms)

HOOKT® is one of the world's largest private mobile communities. With HOOKT, Boost mobile customers are now able to join an interactive and interest-categorized mobile community that communicates across multiple wireless platforms. This unique service

incorporates multiple features, such as Email, IM, Picture profiles, and both public and private messaging lounges.

1. Highlight  and press .
 2. Select a wireless service and press .
- **Chat Now!** provides a list of available chatrooms that you can join and begin your connection to other users.
 - **See Who's Online** displays a list of similar chatroom users who are currently online. Find friends or family that are already connected. Scroll down the list of users and select a contact.
 - **Live Voice Chat** to begin chatting live with other connected users. Give a Shout Out® to any user currently online.
 - **View Photos & Videos** accesses current posted images and videos from the online My Pics & Vids page.
 - **Search for Singles** displays a list of users who are currently participating in the Singles chatroom. Scroll through the list to find other singles.

- **Edit My Profile** allows you to edit your online chatroom profile. This is the information that other users view, such as Picture, Name, etc.

Note

Services may be available for an additional subscription fee. Visit www.boostmobile.com or call Boost Customer Care for additional information.

Using the Browser Menu

Navigating the Web from your phone using the home page is easy once you get the hang of it. For details on how to navigate the Web, select menu items, and more, see “Navigating the Web” on page 140.

Although the home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific Web sites, are not available. For these and other functions, you will need to use the browser menu. The browser menu offers additional options to expand your use of the Web on your phone.

Opening the Browser Menu

The browser menu may be opened anytime you have an active data session, from any page you are viewing.

To open the browser menu:

- ▶ Press **Menu** (right softkey). (The browser menu displays.)

Options available under the browser menu include:

- **Home** returns the browser to the home page.
- **Forward** returns you to a previously viewed page (after having used the  or  key).
- **Mark this page** allows you to bookmark the current site.
- **MyBookmarks** allows you to access and manage your bookmarks.
- **Search** launches a Web search.
- **Send Page to** allows you to send a URL via SMS.
- **Go to Web Address** allows you to navigate directly to a Web site by entering its URL (Web site address).
- **History** keeps a list of links to your most recently visited sites. To navigate to a site, highlight it and press , or select **Go** (left softkey).
- **Page Info** provides information about the current page such as web address and page size.
- **Browser Options** displays additional options:

- **Settings** lets you configure and manage your browser settings: *My homepage*, *Font Setting*, *Privacy*, and *Preference*.
- **Show URL** displays the URL (Web site address) of the site you're currently viewing.
- **Reload This Page** reloads the current web page.
- **Restart Browser** refreshes the current browser session.
- **View Error Log** displays a log of error messages.
- **Browser Info** displays information about your browser.

Creating a Bookmark

Bookmarks allow you to store the address of your favorite Web sites for easy access at a later time.

1. Go to the Web page you want to mark.
2. Press **Menu** (right softkey) to open the browser menu.
3. Select **Mark this page** and press  twice to save the bookmark.
4. Make any modifications, select **Save** and press .

Note

Bookmarking a page does not store the page contents, just its address.

Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.

Accessing a Bookmark

- ▶ Highlight  and press  > **Bookmarks**.
 - or –
- 1. Press **Menu** (right softkey) to open the browser menu.
- 2. Select **My Bookmarks** and press .
- 3. Select the desired bookmark and press .

Setting a New Homepage

Bookmarks allow you to store the address of your favorite Web sites for easy access at a later time.

1. Press **Menu** (right softkey) to open the browser menu.
2. Select **Mark this page** and press .

3. Select the **Set this as my homepage** field and press .
4. Select the onscreen **Save** button and press .

Deleting a Bookmark

1. Press **Menu** (right softkey) to open the browser menu.
2. Select **My Bookmarks**.
3. Select a bookmark and press **Options** (right softkey) > **Delete**. (A confirmation displays.)
4. Press **Delete** (left softkey) to remove the bookmark.

Note

The default homepage can not be deleted.

Going to a Specific Web Site

To go to a particular Web site by entering a URL (Web site address):

1. Highlight  and press  > **Enter Web Address**.
 - or –

Press **Menu** (right softkey) to open the browser menu and select **Go to Web Address** and press .

2. Select the URL field and press .
3. Use either your keypad or keyboard to enter the URL of the Web site and press .
4. Press  again to go to the Web site.

Note *Not all Web sites are viewable on your phone.*

Reloading a Web Page

1. Press **Menu** (right softkey) to open the browser menu.
2. Select **Browser Options > Reload This Page** and press . (The browser will reload the current Web page.)

Restarting the Web Browser

If the Web browser seems to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.

1. Press **Menu** (right softkey) to open the browser menu.
2. Select **Browser Options > Restart Browser** and press .

Data Services FAQs

How will I know when my phone is ready for data service?

Your user name (for example, bsmith01@myboostmobile.sprintpcs.com) displays when you access  > **Settings/Tools > Settings > Phone Info > Phone Number**.

How do I sign in for the first time?

You are automatically signed in to access data services when you turn on your phone.

How do I know when my phone is connected to data services?

Your phone automatically connects when data service is used or an incoming message arrives. Your phone will also display the  or  indicator.

Can I make calls and use data services at the same time?

Since DDTM is off by default, you can receive incoming calls or SMS messages while in a data transmission session.

When is my data connection active?

Your connection is active when data is being transferred. Outgoing calls are allowed; incoming calls go directly to voicemail. When active, the  or  indicator animates on your phone's display screen.

When is my data connection dormant?

If no data is received for 10 seconds, the connection goes dormant. When the connection is dormant, voice calls are allowed. (The connection may become active again quickly.) If no data is received for an extended period of time, the connection will terminate.

Can I sign out of data services?

You can sign out without turning off your phone; however, you will not be able to browse the Web or use other data services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time.

To sign out, go to  > **Settings/Tools** > **Settings** > **More...** > **Data** > **On/Off** in your phone's menu.

Section 3C

Music

- ♦ Accessing Music (page 154)
- ♦ Playing a Music File (page 155)

Accessing Music

You can access Music stored on the microSD memory card right from your phone's main menu.

- ▶ Highlight  and press  > **Music**.

Note

If no microSD card is available, the display will prompt "Memory card not present." Insert a microSD card to play music files stored on the card.

Copying Music to Your Phone's Memory Card

Copy music files from your computer to your phone's micro SD memory card. Music files must be stored in

the Music folder on your memory card to be recognized by the Music player.

To create a Music folder on your memory card

1. Highlight  and press  > **Settings/Tools** > **Tools** > **Mass Storage** > **File Manager** > **Memory Card**.
2. Select **Options** > **Create Folder**.
3. Enter the name <Music> for the new folder.
4. Press **Done** (left softkey) to save the new folder on the card.

To copy music files to the memory card:

1. Connect your phone to your PC using a USB cable. (For more information, see "Connecting Your Phone to Your Computer" on page 102.)
2. Copy music files to the **Music** folder on your memory card.

Note

Your phone's music player will recognize and play DRM-free (unprotected) MP3 and WMA files.

To copy music files to the phone:

1. Highlight  and press  > **Settings/Tools** > **Tools** > **Mass Storage** > **File Manager** > **Memory Card**.

2. Select the **Music** folder to view a list of music files.
3. Highlight a music file, then select **Options** > **Copy**.
4. Highlight songs and press  to mark files for copying.
5. Press **Done** (left softkey) > **Phone**, then select a folder for copying and press **Paste** (left softkey).

Note Your phone has limited internal memory. It is recommended that you store music and other files on your memory card.

4. Select and copy the music files to a folder on your computer's hard drive.

Note Although you can store AAC+ files on your computer, they will only be playable on your phone and on your account.

If you copy the files to a new microSD card, you will need to create a folder on the card called "MUSIC" to be able to play the music files.

Backing Up Your Downloaded Music Files

Boost recommends you back up your music files to your computer so you can access the files in case your microSD card is lost or damaged, or if you install a new microSD card.

1. Connect your phone using a USB cable or the built-in connection on Bluetooth-enabled phones.
2. Highlight  and press  > **Settings/Tools** > **Tools** > **Mass Storage** > **Connect to PC**.
3. Use your computer to navigate to the microSD card's **Music** folder.

Playing a Music File

1. Highlight  and press  > **Music**. This provides access to the Music page where your currently available audio/music files are displayed.
2. Use your navigation key to highlight a song from the list and press .
 - Press **File Info** (left softkey) to reveal file information such as File Name, File Size, and File Type. Press **Done** (left softkey) to exit the information screen.
3. Press **Mute/Unmute** (left softkey) to toggle the speaker on or off.

4. Press **Options** (right softkey) to select from the following music options:
 - **Visual Effect** changes the onscreen visual effects shown during audio playback.
 - **Info** displays a brief file information popup containing: Name and Artist information.
 - **Exit** returns you to the previous music playback screen.
5. Press the navigation key up to highlight  and activate the **MYMUSIC** popup list. This list provides quick onscreen access to your current list of music without exiting from the music playback screen.
 - Use your navigation key up or down to scroll through the available list of songs.
6. Press the navigation key down to highlight  and activate the shuffle music feature. Available choices are:



Repeat once: repeats the currently playing song.



Repeat all: replays the current list when the list ends.

SFL **Shuffle On:** the current list of songs are randomly shuffled for playback

Receiving an Incoming Call While Playing Music

An incoming call causes the currently played music file to be paused while the phone call is active. Once the current call is ended, you can select to resume any paused applications. (Music will resume playing automatically.)

1. Answer an incoming call by pressing .
2. When you are done with your call, press  to end the call.
3. At the prompt "**Continue to play?**", press **1. Yes** to continue playing music, or **2. No** to stop playback.

GPS Navigation

- ◆ *GPS Services (page 157)*
- ◆ *Navigation (page 157)*
- ◆ *Using Navigation (page 158)*

GPS Services

Activating Location Mode

Navigation requires that your device's Location setting is activated. By default, location service is turned on.

To turn Location On if it is set to Off:

1. Highlight  and press  > *Settings/Tools* > *Settings* > *More...* > *Location*. (The Location disclaimer displays.)
2. Read the disclaimer and press .
3. Highlight *On* and press .

Navigation

Boost Navigation is a GPS navigation system that gives you turn-by-turn directions onscreen and by voice right from your device. Get audible GPS directions for appointments, meetings, or even the closest coffee shop.

Registering for Navigation Service

Before you can fully take advantage of the navigation feature, you must first properly register your device.

1. Highlight  > *Drive To* and press .
2. If prompted to get a handler (username), highlight *Get Handler* and press .
3. Follow the onscreen instructions.

Using Navigation

1. Select  to access the Navigation menu.
2. Select an option and follow the onscreen instructions to take advantage of the full suite of features.
 - **Drive To** lets you enter an address (vocally or using the keypad) or select from categories such as *My Favorites*, *Recent Places*, or *Businesses* to search for turn-by-turn directions. Press the right navigation key to reveal the following choices:
 - **My Favorites**: user-defined favorite locations.
 - **Recent Places**: recently entered locations.
 - **Address**: manually entered street addresses.
 - **Intersection**: used to locate a specific address by using two separate street addresses to identify an intersection.
 - **City**: used when you do not know a physical address but would like driving directions to a city.
 - **Businesses**: locations based on business categories.
 - **Airports**: local airports based on current GPS location.
 - **Search** provides a categorized list of locations such as Gas Stations, Grocery Stores, and Hospitals to help find local businesses and services.
 - Categories include options such as Food/Coffee, Gas Stations, Gas by Price, Banks/ATMs, WiFi Spots, Parking Lots, Hotels & Motels, and Movie Theaters.
 - **Maps & Traffic** lets you view maps and get traffic information for your current location or for any other location (with similar categories as *Drive To*).
 - **Share & More** provides access to additional services such as Share Address, Record Location, and Preferences.

Section 4

***Safety and Warranty
Information***

Important Safety Information

- ◆ *General Precautions (page 160)*
- ◆ *Maintaining Safe Use of and Access to Your Phone (page 161)*
- ◆ *Using Your Phone With a Hearing Aid Device (page 163)*
- ◆ *Caring for the Battery (page 164)*
- ◆ *Radio Frequency (RF) Energy (page 165)*
- ◆ *Owner's Record (page 167)*
- ◆ *User Guide Proprietary Notice (page 168)*

This phone guide contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the bottom portion of your phone where the internal antenna is located while using the phone.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

Note

For the best care of your phone, only manufacturer-authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

Maintaining Safe Use of and Access to Your Phone

Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note

Always turn off the phone in healthcare facilities, and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note

Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your Boost invoice.

Warning Regarding Display

The display on your handset is made of glass or acrylic and

could break if your handset is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

Please Note the Following Information When Using Your Handset

1. WARNING REGARDING DISPLAY

- The display on your handset is made of glass or acrylic and could break if your handset is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

2. WARRANTY DISCLAIMER: PROPER USE OF A TOUCH SCREEN HANDSET

- If your handset has a touch-screen display, please note that a touch-screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch-screen may damage the tempered glass surface and void the warranty.

Using Your Phone With a Hearing Aid Device

A number of Boost phones have been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones that have been rated have a label located on the box. ***Your Samsung Rant™ has an M4 and T4 rating.***

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise; even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying

out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

Hearing aid devices may also be measured for immunity to interference noise from wireless phones and should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for "excellent use." This is synonymous for T ratings.

Boost further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. More

information about hearing aid compatibility may be found at: www.fcc.gov, www.fda.gov, and www.accesswireless.org.

Getting the Best Hearing Device Experience With Your Phone

To further minimize interference:

- Set the phone's display and keypad backlight settings to ensure the minimum time interval:
 1. Highlight  and press  > Settings/Tools > Settings > Display > Backlight.
 2. Select the minimum time interval setting and press .
- Position the phone so the internal antenna is farthest from your hearing aid.
- Move the phone around to find the point with least interference.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire, or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Boost is not aware of similar problems with Boost phones resulting from the proper use of batteries and accessories approved by the manufacturer of your phone. Use only manufacturer-approved batteries and accessories found through your phone's manufacturer, or call to order. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.

- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Li-Ion) Batteries

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

For safe disposal options of your Li-Ion batteries, contact your nearest Boost authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Radio Frequency (RF) Energy

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watt to 0.2 watt in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if

you wear a handset on your body, use the supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least **7/16 inch (1.5 centimeters)** from your body when transmitting. Use of non-manufacturer-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC Web site at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR value corresponds to the relative amount of RF energy absorbed into the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean

variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the Rant™ are:

Cellular CDMA mode (Part 22):

Head: 0.70 W/kg; Body-worn: 0.901 W/kg

PCS mode (Part 24):

Head: 1.01 W/kg; Body-worn: 0.564 W/kg

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines.

FCC ID number: A3LSPHM540

More information on the phone's SAR can be found from the following FCC Web site: <http://www.fcc.gov/oet/ea/>.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the direction of the internal antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Owner's Record

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: SPHM540 (Samsung Rant™)

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307	5,109,390	5,267,262	5,416,797
5,506,865	5,544,196	5,657,420	5,101,501
5,267,261	5,414,796	5,504,773	5,535,239
5,600,754	5,778,338	5,228,054	5,337,338
5,710,784	5,056,109	5,568,483	5,659,569
5,490,165	5,511,073		

T9 Text Input is licensed by Nuance Communications, Inc. and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

User Guide template version 7B (December 2007)

Manufacturer's Warranty

◆ Manufacturer's Warranty (page 169)

Your phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

Manufacturer's Warranty

STANDARD LIMITED WARRANTY

What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/Pouch/Holster	90 Days
Game Pad	90 Days
Other Phone Accessories	1 Year

What is Not Covered?

This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other

externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations?

During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the

defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits on SAMSUNG's Liability?

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

"THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;

"WARRANTIES OF TITLE OR NON-INFRINGEMENT;

"DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;

"THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR

"COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/ PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY

BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRDPARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING

THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all

settings to default settings. Please contact the Samsung Customer Care Center for details.

Important

Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Samsung Telecommunications America, LLC:

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG (726-7864)

Important

If you are using a handset other than a standard numeric keypad, dial the numbers listed in brackets.

Phone: 1-888-987-HELP (4357)

©2010 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice. [011604]

Index

Numerics

2sec Pause 32

A

Abbreviated Dialing 33

Activation 9

Airplane Mode 61

Alarm Clock 87

Alert Notification 54

Alpha 34

Answering Calls 27

Applications, Downloading
137

Automatic Speech
Recognition 91–96

B

Backlight 55

Battery 22–25
Capacity 22
Charging 23

Disposal 165

Installing 22

Bluetooth 123–127

Pairing 125

PC Pairing 125

Sending Data 126

Settings 124

Trusted Devices 124

Boost Media Mail

Downloading Online Pictures
119

Managing 118

Uploading Pictures 119

C

Calculator 89

Calendar 82–85

Adding Events 82

Editing Events 84

Erasing Events 84

Call Forwarding 136

Call Waiting 135

Caller ID 135

Camcorder 112–113

Camera - See also Pictures
106–122

Options 109

Settings 111

Car-Kit/Headset 63

Carousel

Shortcuts 62

Contacts 74–81

Adding a New Group 78

Adding a Phone Number 76

Adding an Entry 74

Assigning a Picture 79

Assigning Speed Dial
Numbers 76

Deleting 76

Editing an Entry 78

Secret Entries 80

Selecting a Ringtone 79

Speed Dial Numbers 77

Contacts Match 33

D

Data

Enable 69

Data Services 137–153

Applications 137

Disabling 69

Downloading Games,

Ringtones and More 145

FAQs 152

Security Features 69

User Name 138

Dialing Font 57

Dialing Options 27

Digit Dial

Adapting 95

Display Screen 18

Brightness 56

Changing 56

Wallpapers 56

E

Email 142

Emergency Numbers 28

Emoticons 35

End-of-Call Options 30

Enhanced 911 (E911) 29

Entering Characters

Letters 41

Numbers 42

Symbols 42, 43

Entering Text 34–43

Alpha Mode 36

Dual Language 39

Numbers 37

Preset Messages 37

Selecting Mode 34

Smileys 37

Symbols 37

T9 Text Input 35

T9(English) 35

Event

Adding 82

Alert Menu 83

Editing 84

Erasing a Day's Events 84

Erasing Single Event 84

Going To 84

Viewing 83

F

FCC Notice 166

File Manager

Accessing 86

Opening Files 86

Options 87

G

GPS Navigation 157

Registration 157

H

Hard Pause 32

Headset 63

Hide Secret 80

History 70–73

Delete 72

Delete All 73

Erasing 72

Making a Call 71

Options 71

Saving a Number 72

Viewing 70

I

In-Call Options 29
Instant Messaging 144
Internet - See Web 147

K

Key Functions 15
Keypad Time Length 55

L

Language 56, 57
Location Settings 58
Locking Your Phone 65

M

Main Screen Navigation 44–50
Making Calls 26
Media Mail
 Sending Pictures and Video
 116
Memo Pad 88
Menu 1
 Navigation 25
Menu Orientation 57

Menu Style 56
Messaging
 Notification 58
microSD Card 99–105

N

Navigating the Main Screen
 44–50
Navigation
 Intersection 158
 Using 158
Number 35

O

One Click 44–50
Owner's Record 167

P

Pauses 32
Personalizing 51
 Ringtone 51
 Wallpaper 51
Phone (illus.) 14
Phone Number
 Abbreviated Dialing 33

Contacts Match 33
Dialing From the Contacts
 List 33
Displaying 26
Finding 31
Plus Code Dialing 32
Saving 31
 With Pauses 32
Phone Settings 51–63
 Airplane Mode 61
 Auto Answer Mode 63
 Call Answer Mode 63
 Display Settings 55–57
 Favorite Shortcuts 62
 Language 56
 Location Settings 58
 Messaging Settings 58–61
 Sound Settings 52–55
 TTY Use 61
Pictures - See also Camera
 106
 Sending 116
 Storing Pictures 114

Taking 106
Plus Code Dialing 32
PowerSave Mode 56
Preferred Roaming List 90
Preset Messages 35, 134
PRL 90

R

Resetting Your Phone 68
Ringtone Type 52, 53
 Media Mail 53
 Messages 53
 Scheduled Events 53
 Text Message 53
 Voice Calls 52
 Voicemail 53
Ringtones
 Assigning to Contacts 79
 Buying and Downloading 52
 Get New Ringtones 52

S

Safety Information 160–168
Saving Number 75

Scheduler 82
Security 64–69
 Menu 64
Sending
 Text Messages 93
Service
 Activation 9
 Dialing Services 81
Services
 Managing Your Account 10
Shooting Video 112–113
Signature 35
Silence All 54
SMS Text Messaging 132
Sounds
 Alert Notification 54
 Ringtone Types 52
 Silence All 54
 Vibrate All 54
 Volume 53
Special Numbers 67
Storage Options 114

Symbol 34

T

T9 Text Input 35
T9(English) 34
Task List 85
Text Message
 Options 35
Text Messaging 132
Text Options 35, 38
Three-Way Calling 135
TTY Use 61
Turning Your Phone On and Off 21

U

Unlocking Your Phone 65
Updating Phone Software 90

V

Vibrate 54
Vibrate All 54
Videos
 Options 113
 Recording 112

Voice Memos 97

 Deleting 98

 Playing 98

Voice Service

 Media Mail Message 93

Voicemail

 Notification 131

 Retrieving 131

 Setting Up 10, 130

Volume Settings

 Adjusting 53

 Advanced 53

 Alarm 53

 Applications 53

 Earpiece 53

 Headset 53

 Media Mail 53

 Ringtone 53

 Speakerphone 53

 Text Message 53

 Voicemail 53

W

Wallpaper 51

Warranty 169

Web 139–152

 Applications 137

 Data Service 139

 Downloading Games,
 Ringtones and More 145

 FAQs 152

 Navigating the Web 151

 User Name 138

Whisper

 Off 30

 On 30

World Time 90